

MV-370 / MV-372

VoIP GSM Gateway

User Manual

MV-370

MV-372



【Content】

1. Introduction	1
2. Function description	1
3. Parts list	1
4. Dimension: 14.5cm x 17cm x 3.9cm	2
5. MV-370 Panel description	3
6. MV-372 Panel description	4
7. CABLING	5
8. Web Page Setting	6
9. System Information	7
10. Route	7
10.1 Mobile TO LAN Settings.....	8
10.2 Call Back Service (50 sets).....	10
10.3 Mobile to LAN Speed Dial Settings	11
10.4 LAN to Mobile Settings	12
11. Mobile	14
11.1 Mobile Status	14
11.2 Mobile Setting	15
11.3 Mobile / SMS Agent	20
11.4 Send Bulk of SMS via Microsoft Excel	22
11.5 use AT Command via Telnet or your program	32
11.6 USSD SIM Balance Check via Telnet	33
11.7 SIM Setting	35
11.8 Operator Setting.....	37
11.9 Cell Info.....	39
11.10 USSD (Unstructured Supplementary Service Data).....	44
12. Network	48
13. SIP Setting	52

13.7.1 486(busy here), 503(Service unavailable).....	60
13.7.2 180 Ring on/off.....	60
13.7.3 183(Session Progress).....	60
13.7.4 Dial Peer	60
13.7.5 Call data to server.....	60
14. NAT Trans.....	65
15. Update	66
16. System Auth	68
17. Save Change	69
18. Reboot	70
19. IP Setting	71
20. Specification	73
20.1 Protocols.....	73
20.2 TCP/IP	73
20.3 Codec	73
20.4 Voice Quality.....	73
20.5 GSM (MV-370/MV-372)	74
21. Simple Steps	75
22. Appendix: Setup MV-370/MV-372 with Asterisk.....	76

1. Introduction

MV-370/MV-372 is a 1/2 channels VoIP GSM Gateway for call termination (VoIP to GSM) and origination (GSM to VoIP). It is SIP based and compatible with Asterisk. It can enable to make 1/2 calls simultaneously from IP phones to GSM networks and GSM network to IP phone.

2. Function description

2.1 VoIP(SIP) 、 GSM(MV-370/MV-372) conversion.

2.2 50 sets of LAN->MOBILE routes setting , 50 sets of MOBILE->LAN routes setting.

2.3 Voice response for setting and status (dial in from mobile).

2.4 Series connections to save bills.

2.5 Standard SIP(RFC2543,RFC3261) protocol ,
Communicates with other gateway or PC.

3. Parts list

Please check the parts for any missing parts. If do, please contact our agents :

3.1 「 MV-370/MV-372 」 main body

3.2 Power adaptor AC-DC (110V AC – 12V DC) or (220V AC – 12V DC)

3.3 Network cable

3.4 Antenna

3.5 User Manual



(3.1) MV-370



(3.1) MV-372



(2)




(3)




(4)

4. Dimension: 14.5cm x 17cm x 3.9cm

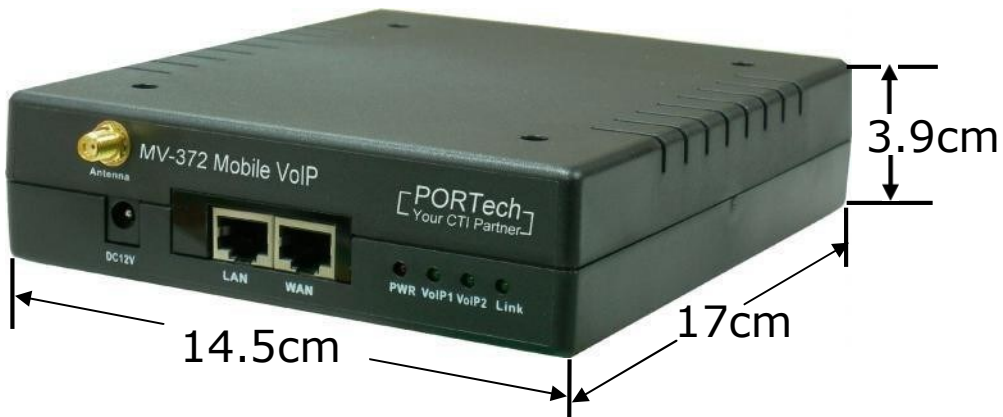

5. MV-370 Panel description

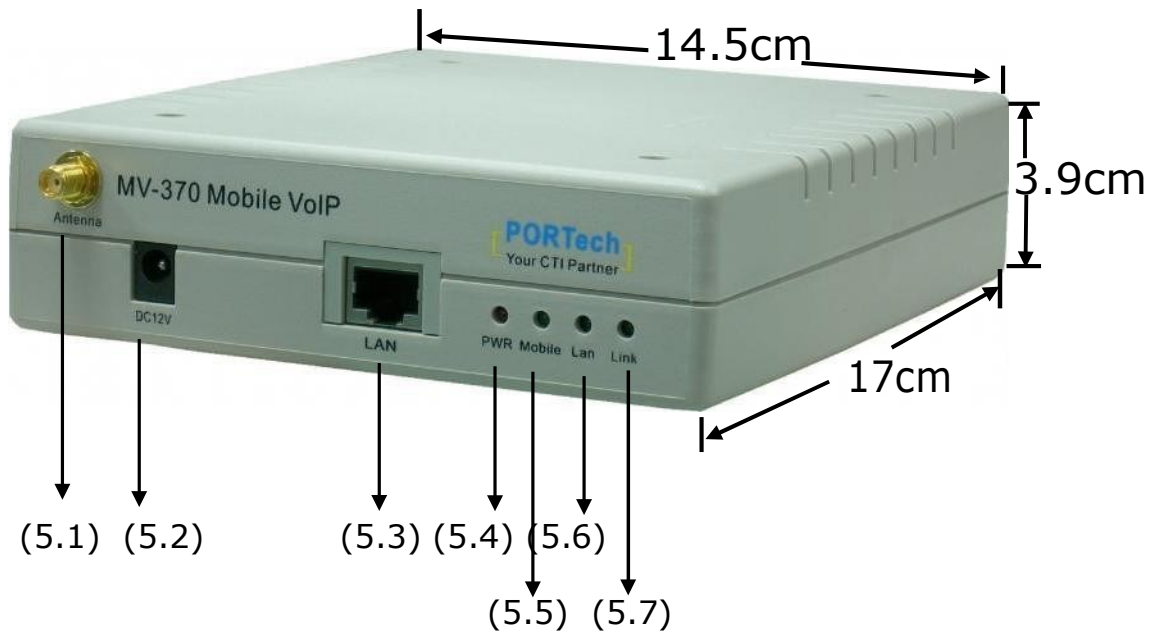

5.1 Antenna : Antenna connector.

5.2 DC 12V : Power socket.

5.3 LAN: Standard RJ-45 socket, connecting to Hub circuit.

5.4 PWR: Power indicator light, red light. Light is on when system's power supply is normal.

5.5 MOBILE: GSM indicator light, green light. Light flashes when GSM status is normal; light turns on constantly when GSM is called.

5.6 LAN: LAN indicator light, green light. Light flashes when Lan is called; light turns off when GSM answered.

5.7 LINK: Link indicator light, green light. Light is on when network is connected correctly.

6. MV-372 Panel description



6.1 Antenna : Antenna connector.

6.2 DC 12V : Power input.

6.3 LAN : LAN port. It also can be DHCP Server.

6.4 WAN: RJ-45 internet connector , standard RJ-45 socket , connect to HUB.

6.5 PWR (Power LED) : Light up when power is normal.

6.6 VoIP1 : an indicator light of VoIP1


6.7 VoIP2 : an indicator light of VoIP2

6.8 LINK Indicator : Light up when network is connected.

7. CABLING

7.1 Connect the internet cable from HUB to the 'WAN' connector of the MV-372.

*If you need to stack up more MV-372, you can stack up as follows.

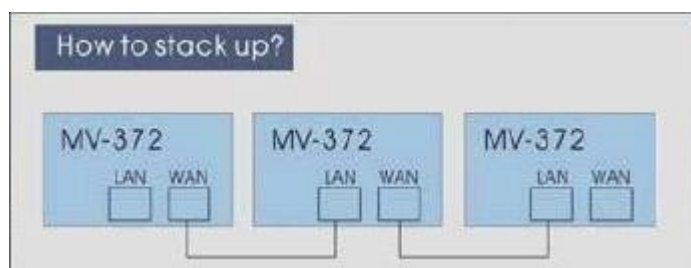

7.2 Connect the antenna and put it in proper position to get the best signal reception.

7.3 Insert the SIM card from back of the main body. (Take the slide off first).

7.4 MV-370/MV-372 support manual switch IP MODE to DHCP and manual restore to original firmware for update failure.

There are SW1 and SW2 button shows as follow diagram:



7.4.1 SW1 function: Restore the factory default IP 192.168.0.100

STEP: Please press the SW1 in 7~8 seconds till the Mobile and LAN led flash blink.

7.4.2 SW2 function: Switch MV-37X IP to DHCP MODE

STEP: Please press the SW2 about 7~8 seconds till the Mobile and LAN led flash blink.


7.4.3 SW1 + SW2 function: Manual restore and restart MV to original firmware for update failure.

STEP: Please remove the MV power cable, and press the SW1 and SW2 at meantime. Then plug in the power DC 12V and don't let go in 4~5 seconds. When Mobile and LAN led flash blink, you can reboot the device and login to 192.168.0.100 for firmware update procedure.

7.5 Connect the power adaptor. The 'POWER' LED should be light up.

8. Web Page Setting

When the IP setting is done, the operator may setup all the rest parameters via web page. Browse the IP address from Internet Explorer (e.g. <http://192.168.0.100>). The following page shows up :



Enter your username and password to login

VoIP server

Username

Password

Login Clear

Remember last login

Enter the username and password for authentication. (default username=voip, password=1234). The page follows when the username and password are correct.

9. System Information.

9.1 When you login the web page, you can see the demo system current system information like firmware version, company... etc in this page.

9.2 Also you can see the function lists in the left side. You can use mouse to click the function you want to set up.

PORTech Your CTI Partner	
Mobile VoIP2 v10.115	
Model Type:	MV-372
Module Description:	GSM:850/900/1800/1900MHz (SIM3x0)
Firmware Version:	Tue Oct 19 10:13:19 2010
Codec Version:	Thu Jul 29 11:15:45 2010
Contact Address:	150, Shiang-Shung N.Road., Taichung, Taiwan, R.O.C.
Tel:	886-4-23058000
Fax:	886-4-23022596
E-Mail:	sales@portech.com.tw
Web Site:	http://www.portech.com.tw

© 2010 PORTech Communications Inc.

10. Route

Important:

The route table -50 sets can share by two channels

The setting, please refer 11.2 Mobile setting

ex: Mobile 1 use the route table for item 0-24,

Mobile 2 use the route table for item 25-49

10.1 Mobile TO LAN Settings

The operator may assign 50 sets of routing rule to transfer the call incoming from MOBILE to LAN.

The screenshot shows the PORTech web interface. On the left is a navigation menu with the following items: Route, Mobile To Lan Settings (highlighted with a red box), Mobile To Lan Speed Dial, Lan To Mobile Settings, Mobile, Network, SIP Settings, NAT Transform, Update, System Authority, Save Change, and Reboot. The main content area is titled "Mobile To LAN Table". It features a "Page: 1" dropdown menu. Below this is a table with the following structure:

Item	CID	URL	Select
0	*	*	<input type="checkbox"/>
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Below the table are three buttons: "Delete Selected", "Delete All", and "reset".

Underneath the buttons is the "Add New" section, which includes three input fields:

- Position: [] (0~49)
- CID: [] Ex:0911111111, 0911*, *
- URL: [] Ex:192.168.0.1, *2St

At the bottom of the "Add New" section are two buttons: "Add" and "reset".

The MV-370/MV-372 will transfer to the URL according to the caller ID of the Mobile.

*CID :

- (1) may enter the whole number, e.g. 0911111111
- (2) only part of the number (prefix) e.g. 0911* means any number starting with 0911 will be accepted

(3) * means all numbers can be accepted

(4) N means the calls without the CID

Please note the priority of the rules. The item which has more digits will have higher priority. If the digits are the same, then former one gets the higher priority.

*URL : The IP address to transfer this call

(1) may enter the whole IP address, e.g. 192.168.0.101 or proxy extension or phone number.

(2) If this field is blank or simply 'N', it means refuse to transfer.

(3) If an '*' entered, it means 2-stages-dialing. The call will be answered and prompt dial tone again to receive the IP address/sip extension or **any phone number** as the destination. The caller may enter the IP such as 192*168*0*101#.

*If the device have register proxy server/Asterisk ,you can enter any destination phone number. Please note the proxy server/Asterisk need to set the route of destination phone number.

Example:

(1) Mobile to Lan: 0932*,0911123456

MV-370/MV-372 have register proxy server/Asterisk

The proxy server/Asterisk have the route "09"

When the caller's prefix number is 0932,MV-370/MV-372 will connect 0911123456 automatically

(2) Mobile to Lan: *,*

Any caller call the MV-370/MV-372's sim,MV-370/MV-372 will prompt dial tone.

Caller can enter IP or sip extension or phone number.

*sip extension or phone number both need to register SIP Proxy Server or Asterisk.

*Phone number, SIP Proxy Server or Asterisk need to set the route of this phone number.

10.2 Call Back Service (50 sets)

PORTech
Your CTI Partner

Route

Mobile To Lan Settings

Mobile To Lan Speed Dial

Lan To Mobile Settings

Mobile

Network

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

Mobile To LAN Table

Page: 1

Item	CID	URL	Select
0	0933579613	#	<input type="checkbox"/>
1	+886933579613	#	<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Delete Selected Delete All reset

Add New

Position: (0~49)

CID: Ex:0911111111, 0911*, *

URL: Ex:192.168.0.1, *.2St

Add reset

You can set call back service as the following steps

- (1) CID : set the phone number here (up to 50 sets)
- (2) URL: # (# is the command of call back)

Application:

- a.Call MV-370/ MV-372
- b. MV-370/ MV-372 will detect the phone number is in call back list or not
- c. If yes, MV-370/ MV-372 will reject the call, and call it back
- d.You will receive the call from MV-370/ MV-372, and prompt a dial tone

10.3 Mobile to LAN Speed Dial Settings

When you set Mobile to LAN Speed Dial Settings and Mobile to LAN at the same time, MV-370/MV-372 will give priority to Mobile to LAN Speed Dial Settings.

PORTech
Your CTI Partner

Mobile To LAN Speed Dial

Item	Name	URL	Select
0	Test	192.168.0.107	<input type="checkbox"/>
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Delete Selected Delete All Reset

*The call will be answered and prompt dial tone again. When the caller may enter the “Num”, system will connect the “URL” as destination.

E.g Num: 0 Name: test URL:192.168.0.107

When the caller hear dial tone and enter 0, system will connect 192.168.0.107

10.4 LAN to Mobile Settings

The operator may assign 50 sets of routing rule to transfer the call incoming from LAN to MOBILE.

PORTech
Your CTI Partner

LAN To Mobile Table

Page: 1

Item	URL	Call Num	Select
0	*	#	<input type="checkbox"/>
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Delete Selected Delete All Reset

Add New

Position: (0~49)

URL: Ex: 192.168.0.1, 192.168.0.*

Call Num:

1. e.g. 0911111111 (may enter the whole number)
2. *: 2-stage dialing
3. #: one-stage dialing
4. #d?a?: for example #d123a456
destination number is 123111111
new destination number is 456111111

Add Reset

The MV-370/MV-372 will transfer to the mobile number according to the incoming URL

*URL : The IP address of the incoming call.

may enter the whole IP address, e.g. 192.168.0.101 or proxy server's extension. If a simple '*' is entered, means no restriction for the incoming IP address.

*Call Num :

-
1. May enter the whole number, e.g. 0911111111
 2. A simple "*" means 2-stages-dialing. The call will be answered and prompt dial tone again to receive the called number as the destination, e.g. 0911111111 or 0911111111#
 3. # for one-stage dialing
 4. # ['d'n]['a'ppp] for one-stage-dialing
[...] is option
'd'n means to delete the beginning n codes,
'a'ppp means to add 'ppp' in front.
For example #d123a456 means one-stage dialing,
delete the first 123 from your destination number,
then add 456 in front as the new destination number.

Example:

Lan to Mobile: *, #

- (1)MV-370/MV-372 and Lan Phone both need to register proxy server or Asterisk.
- (2)Proxy server/asterisk set the route that the prefix of destination number
- (3)When you dial any destination phone number from lan phone,MV-370/MV-372 will connect this call auto.

Example of Application:

When you call the ch.1 MV-370/MV-372 GSM number, it will provide dial tone and you enter a destination number.

Then ch.2 MV-370/MV-372 will dial this number and connect.

ch.1 MV-370/MV-372: mobile to lan set route table *,*

ch.2 MV-370/MV-372:lan to mobile set route table *,#

Additionally, two channels MV-370/MV-372 both need to register proxy server or Asterisk.And proxy server/asterisk set the route that the prefix of destination number dial out from ch.2 MV-370/MV-372.

*The channel 2 MV-370/MV-372's IP: the first IP :5062(e.g. http://192.168.0.100:5062)

11. Mobile

11.1 Mobile Status

PORTech
Your CTI Partner

Mobile Status

2010-10-27 10:00

Mobile 1

Operator:	
SIM Card ID:	
Signal Quality:	
Registration State:	
GSM S/N:	
Motion State:	Mobile: OFF
Incoming URL:	
Incoming Name:	
Outgoing IP:	
Incoming Mob:	
Outgoing Mob:	

- (1) Network Registration : The SIM card of telecom carrier is been registered
- (2) SIM Card ID : SIM card ID.
- (3) Signal Quality : Signal quality. (4)GSM S/N : IMEI Number
- (5) Motion State: The status of SIM card
- (6) Incoming IP : The IP address of the last incoming call from LAN.
- (7) Incoming IP Name: proxy server name
- (8) Outgoing IP : The IP address of the last outgoing call to LAN.
- (9) Incoming Mob : The caller ID of the last incoming call from MOBILE.
- (10) Outgoing Mob: The called number of the last outgoing call to MOBILE.

11.2 Mobile Setting

PORTech
Your CTI Partner

- Route
- Mobile**
- Status
- Settings
- Fwd Settings
- SMS Agent
- SIM Setting
- Operator Setting
- Network
- SIP Settings
- STUN Setting
- Update
- System Authority
- Save Change
- Reboot

Mobile Setting


Only change "mobile" into "on" or "off", just click "submit", no need to click "save change"

(1) VoIP Tx Gain:	<input type="text" value="9"/> (0~12)	VoIP Rx Gain:	<input type="text" value="11"/> (0~15) (2)
(3) LAN Dialtone Vol:	<input type="text" value="9"/> (0~12)		

Mobile 1 ON OFF

(4) Routing Range:	<input type="text" value="0"/> ~ <input type="text" value="49"/> (0~49)		
(5) CODEC Tx Gain:	<input type="text" value="6"/> (0~7)	CODEC Rx Gain:	<input type="text" value="6"/> (0~7) (6)
(7) SIP From:	<input type="text" value="Tel/User (Standard)"/>	Answer delay:	<input type="text" value="0"/> (0~15) (8)
(9) CLID Presentation:	<input type="radio"/> OFF <input checked="" type="radio"/> ON	Restart dial fails:	<input type="text" value="1"/> (0~15) (10)
(11) Mobile PIN Code:	On <input type="checkbox"/> Code: <input type="text"/>	Confirmed: <input type="text"/>	
(12) Dial Prefix:	<input type="text"/>	LAN Answer Mode:	<input type="text" value="Answered"/> (13)
(14) Init AT Cmd:	<input type="text"/>		
(15) Band Type:	<input type="text" value="Default"/>		

Mobile 2 ON OFF

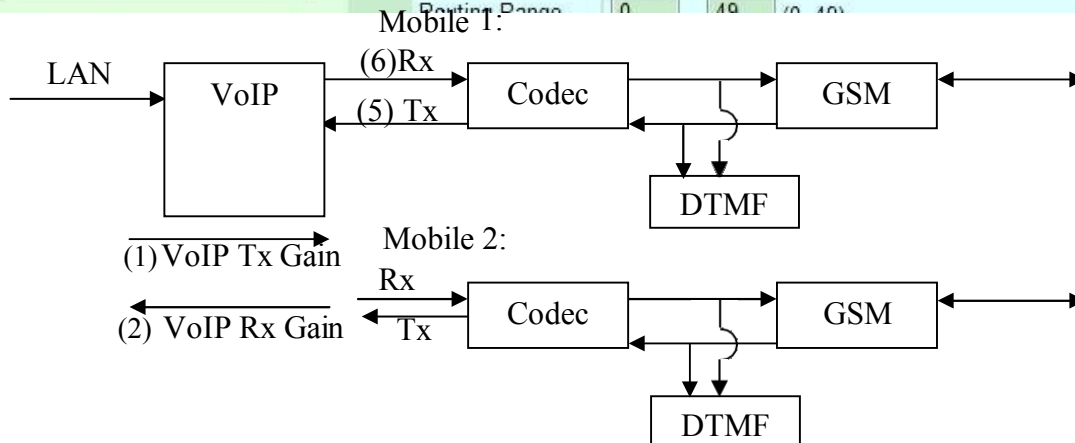

(1) VoIP Tx Gain: To adjust the volume of LAN side.

(2) VoIP Rx Gain: To adjust the volume of Mobile side.

(3) LAN Dial tone Gain: DTMF Receiver is not good, you can adjust gain down.

(4) Routing Range: The route table -50 sets can share by two channels
ex: Mobile 1 use the route table for item 0-24,
Mobile 2 use the route table for item 25-49

(5) CODEC Tx Gain: as above

(6) CODEC Rx Gain: as above

(7) SIP From: Caller ID transfer

- Tel/User (Standard): If you need to register to Asterisk and proxy server, please choose this option. And how to transfer the caller ID to LAN, please refer 21. How to setup Asterisk to receive Caller ID from MV-370/MV-372 (page 42)

MV-370/MV-372 will send the message as follows in the Packet.

From: "caller number" <sip:3001@192.168.0.228>;tag=51088abb

- User/User (Standard): If you need to register to Asterisk and proxy server, please choose this option.

MV-370/MV-372 will send the message as follows in the Packet.

From: " 3001" <sip:3001@192.168.0.228>;tag=51088abb

- Tel/Tel :

MV-370/MV-372 will send the message as follows in the Packet.

From: "caller number" <sip: caller number @192.168.0.228>;tag=6ac93f7c

- ※ Please note: If you choose this option, please don't register to Asterisk and proxy server. Please only fill **proxy server IP** and choose **Active: on** (else field empty) in sip setting/service domain

- User/Tel

MV-370/MV-372 will send the message as follows in the Packet.

From: "Username" <sip: caller number @192.168.0.228>;tag=7f130947

-
-
- ※ If you choose this option, please don't register to Asterisk and proxy server. Please only fill and choose (else field empty) in sip setting/service domain
- (8) Answer Delay: Delay for incoming call when the ring.
- (9) Presentation CLID: If you need to block the Caller Id for call termination, please choose Suppression
- (10) Restart Dial Fail: In this feature, user can initialize and register the module while GSM module dials fail in couple times. When GSM module is dysfunctional, it can avoid the device shut down in advance.
- (11) Mobile PIN Code: If you need to unlock pin code via MV-370/MV-372, you can click "On" and enter pin code.
- (12) Dial Prefix: The prefix number of outgoing calls. When Lan to Mobile, MV-370/MV-372 will automatically add the "Dial prefix" for outgoing mobile.
- (13) LAN Answer Mode:
- *Answered: when mobile answer, and then connect the call
 - *Alerted: when the mobile is ringing back tone, then connect the call
 - *Income: when Lan dial out, then connect soon
- (14) Init AT Cmd: User can fill the AT Command for GSM module
- (15) Band Type: You can manual setting according to your GSM Frequency of carrier.
- (16) ON/Off: If you use this channel, please click on. Otherwise, please click off.
-
-

11.3 Mobile / SMS Agent:

PORTech
Your CTI Partner

SMS Agent

Port	Status	Bank
Mobile 1	Not Ready !!!	<input type="button" value="Rx List"/>
Mobile 2	Not Ready !!!	<input type="button" value="Rx List"/>

SMS Sender

Encode:

Via: Mobile 1 2

Dest Num:

Message:

Maximum Number of ASC7 chars for message:

You have **160** ASC7 chars remaining for your description..

- (1) Rx List: Read received SMS
- (2) Dest Num: the Receiver's phone number
- (3) Message: Please fill the messages that want to send to receiver.

When you click Rx List, you can view all received SMS as follows.

SMS Rx List

Read	Status	RemoteID	Date,Time
<input type="checkbox"/>	REC READ	886936114545	08/01/01,19:34:22
<input type="checkbox"/>	REC READ	886935386862	08/03/12,16:25:27

Click the serial no,you can view message as follows.

SMS Reader

Index	RemoteID	Date,Time
2	886935386862	08/03/12, 16:25:27

MV Serial can send SMS and receive SMS

Back

Delete

11.4 Send Bulk of SMS via Microsoft Excel


First of all, please open a new Excel file.

Step 1 Format Cells

Here, we need you to format cells to “Text” first.

Please click mouse right key, and choose “Format Cells”

BLANK A

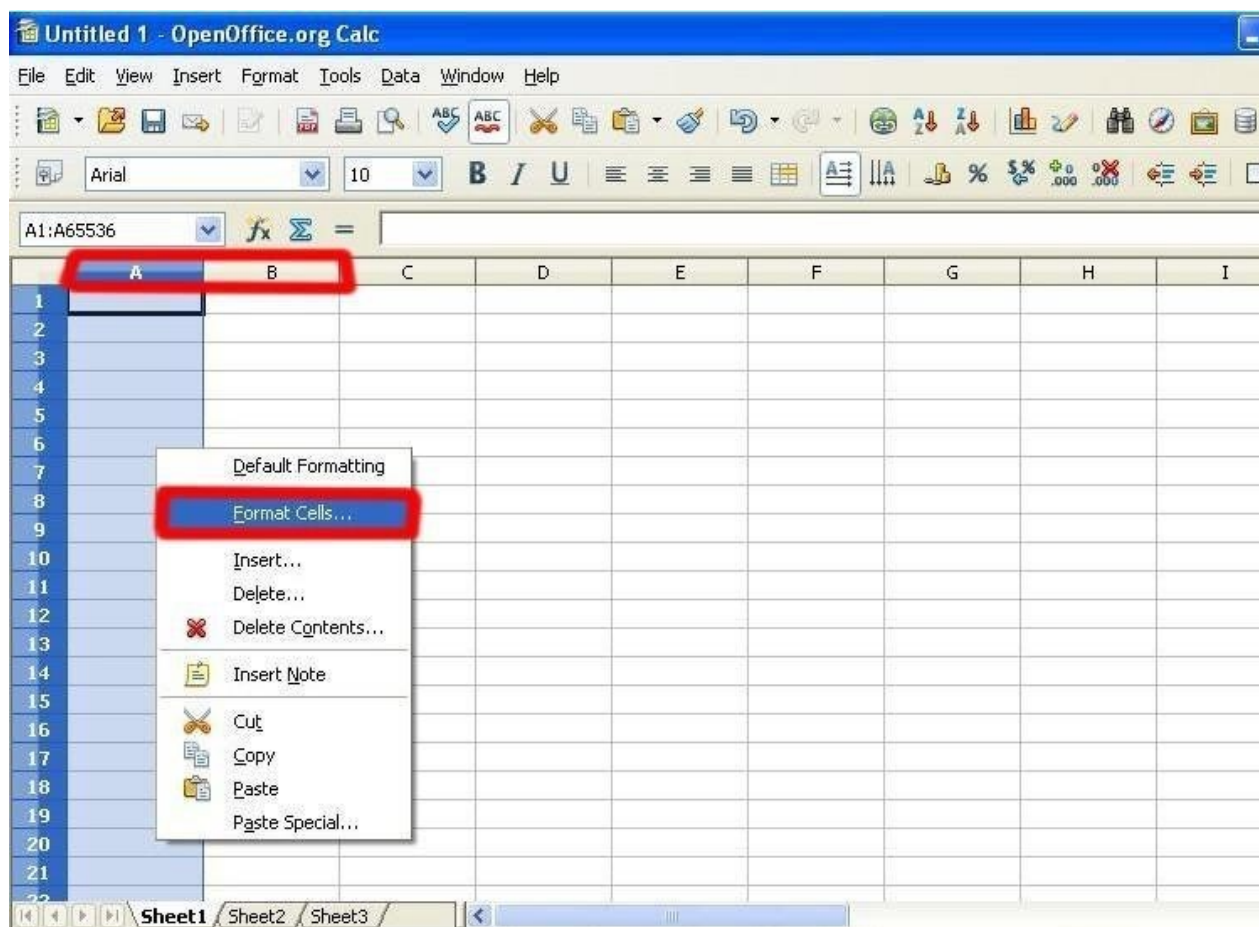


BLANK B



Step 2

In the Format Cells, please select “Text”

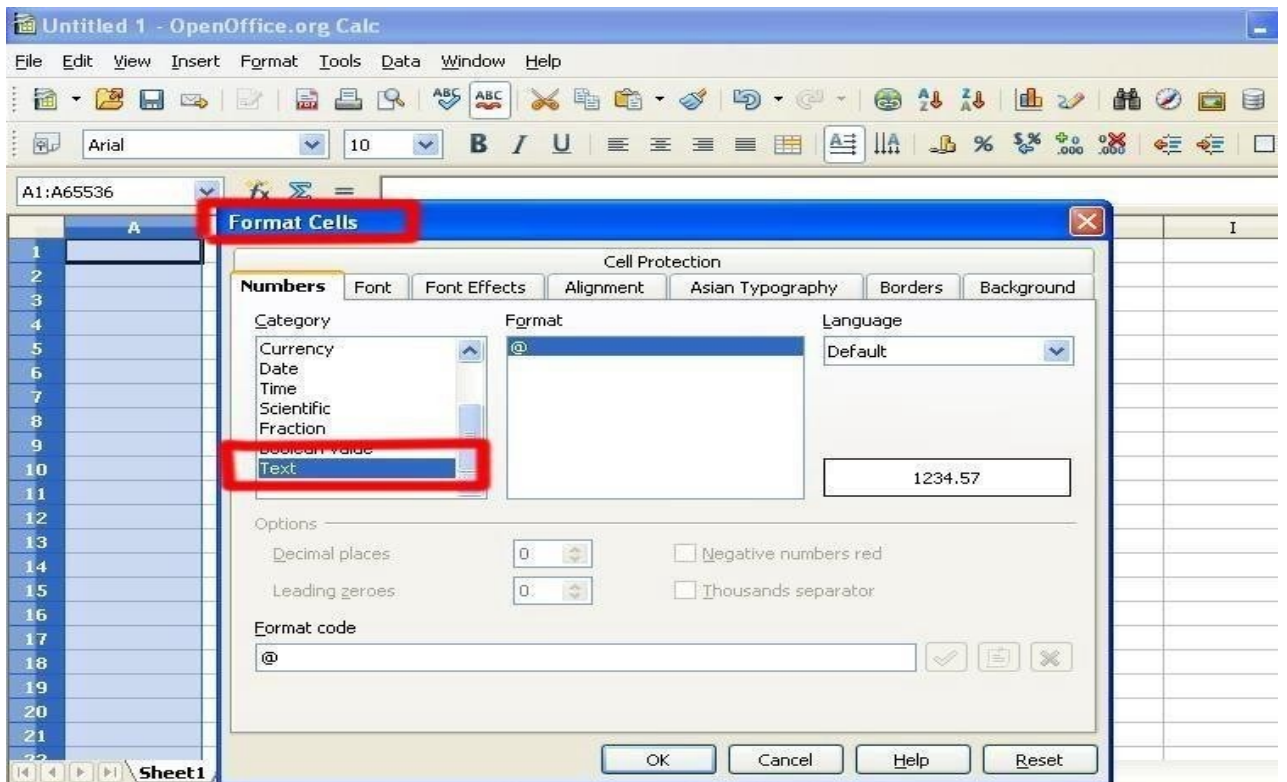


- Please do this action for BLANK A and B both.


Step 3

BLANK A: is for you to key “phone numbers”


BLANK B: is for you to key “text”

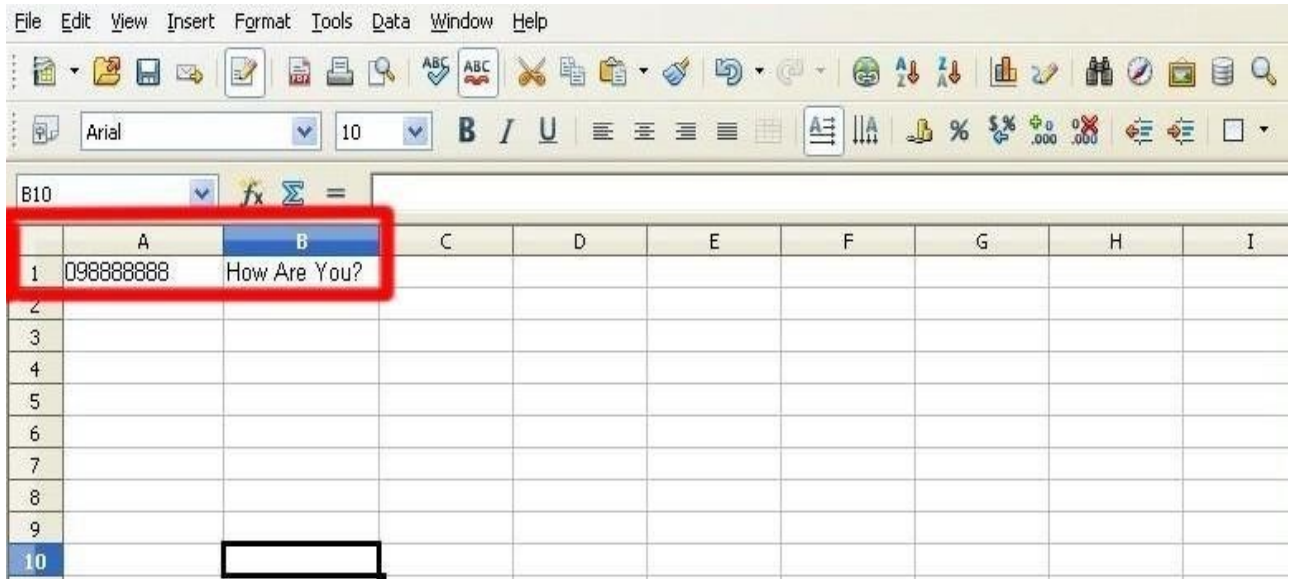

Step 4 Save the file

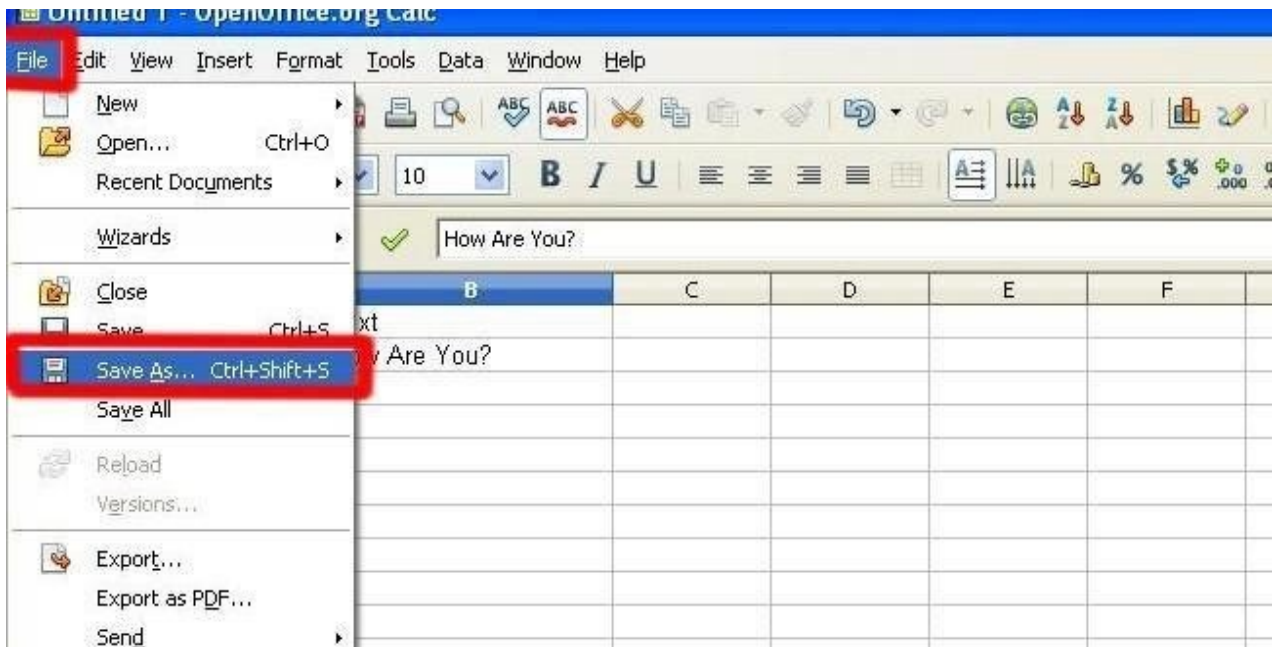


Save the type as “**Unicode Text**”

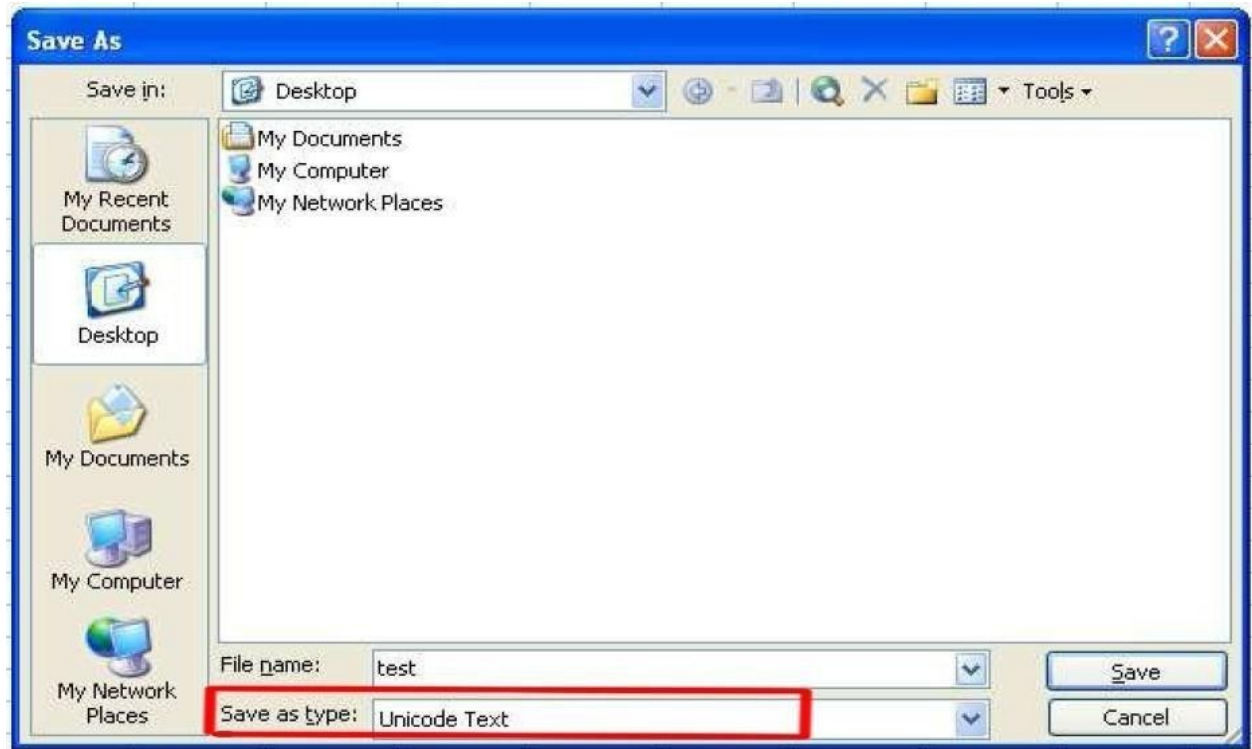

Step 5


Open MVsms_exe -> MV-SMS (Configuration Settings)

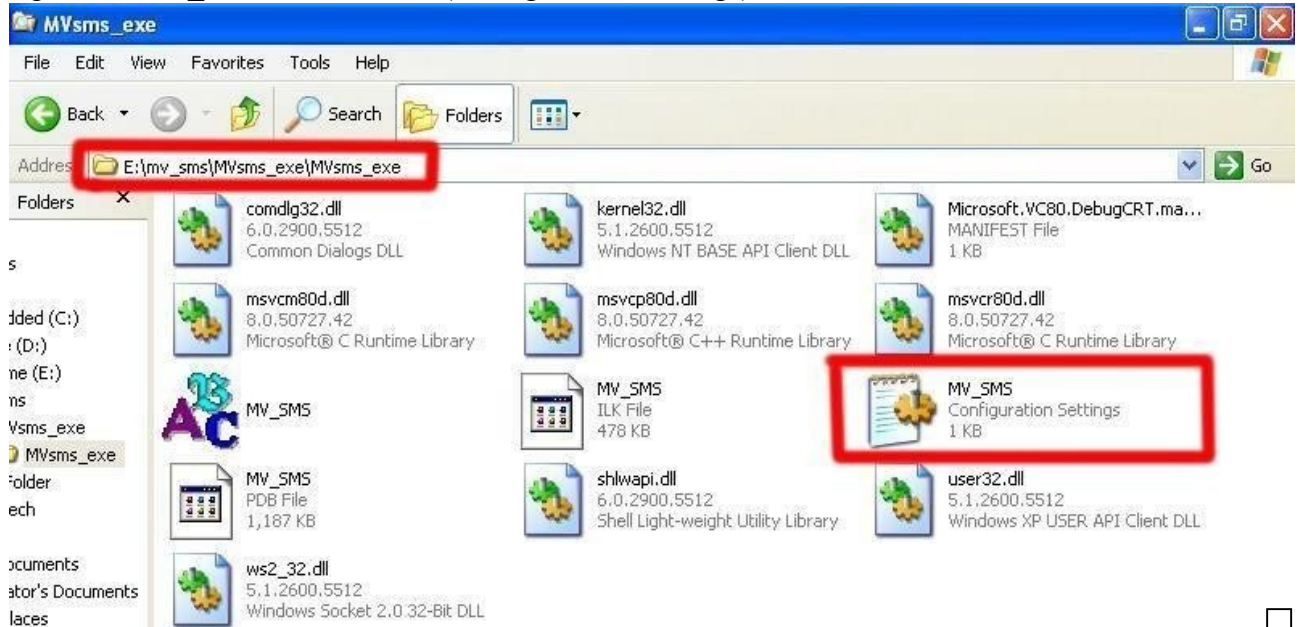

Step 6

Please do the configuration as following:

MV-378

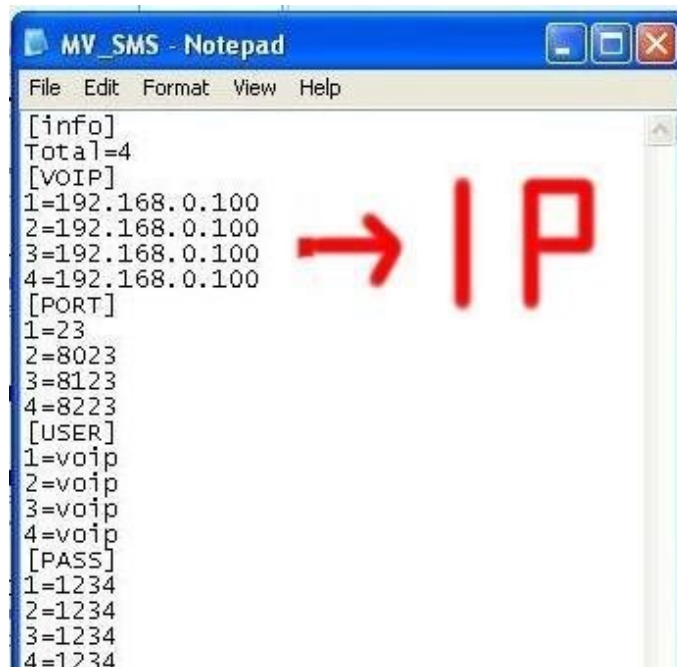

MV-374


```
File Edit Format View Help
[info]
Total=2
[VOIP]
1=192.168.0.100
2=192.168.0.100
[PORT]
1=23
2=8023
[USER]
1=voip
2=voip
[PASS]
1=1234
2=1234
```

MV-372 & MV-370

```
File Edit Format View Help
[info]
Total=4
[VOIP]=1
1=192.168.0.100
[PORT]
1=23
[USER]
1=voip
[PASS]
1=1234
```


Step 7

Run MV-SMS program

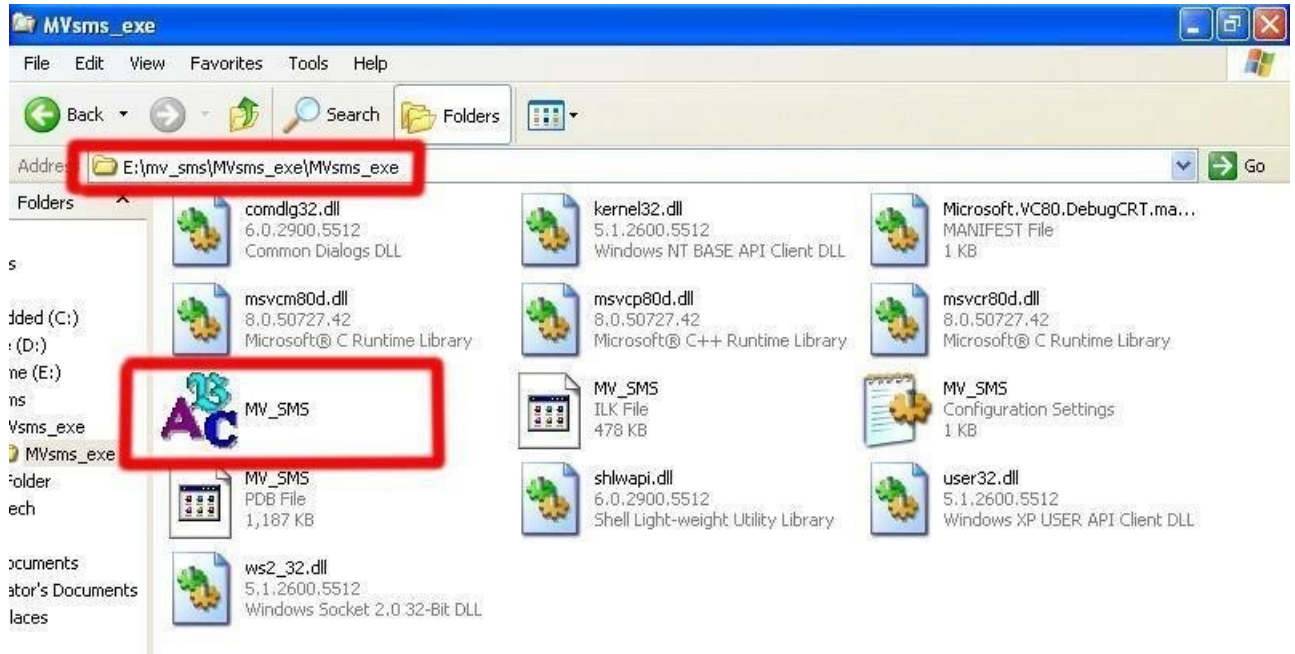


Step 8

1. Open File

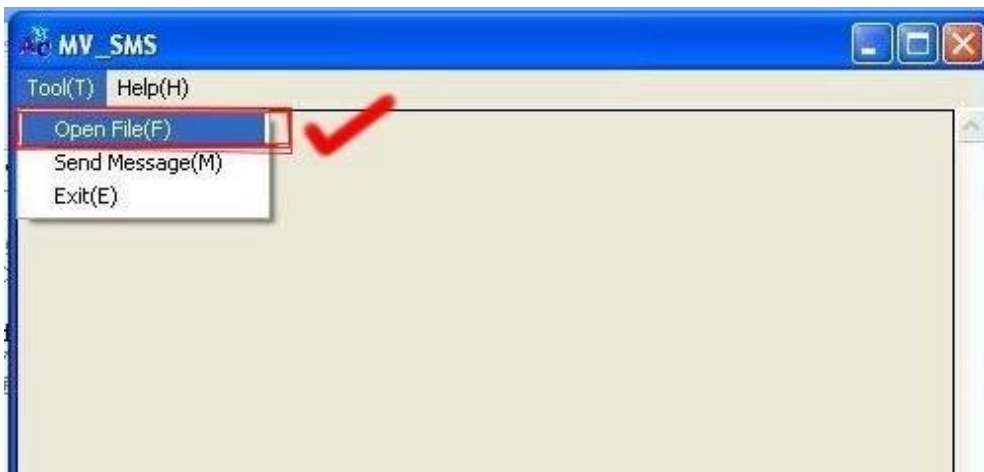


2. Open the “Excel file” that you just saved

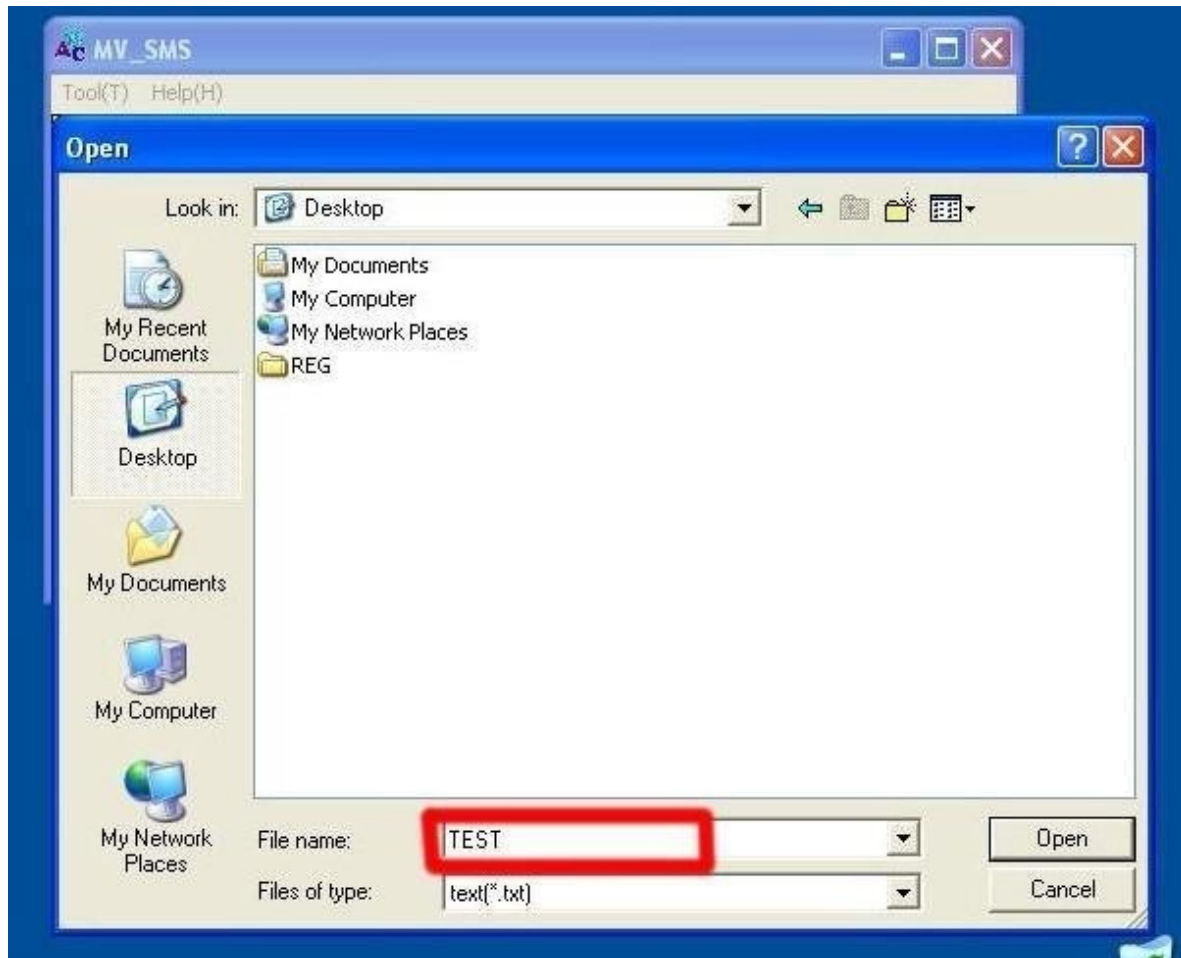

Step 9

Sending

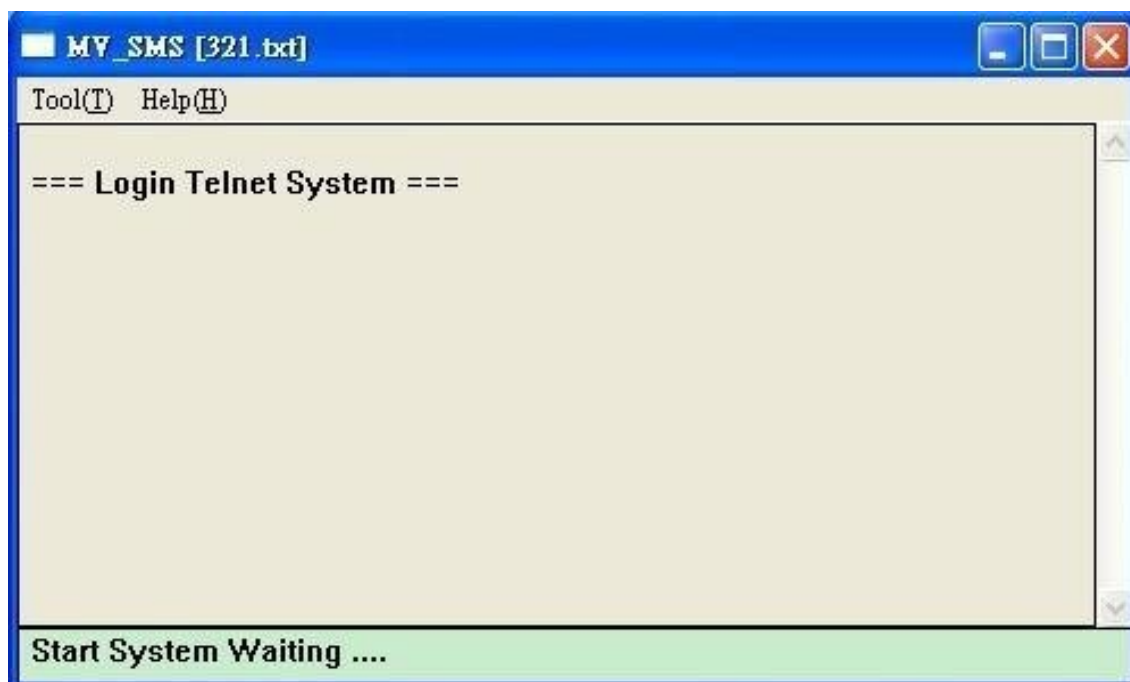

Step 10

Send SMS Complete



```
MY_SMS [321.brd]
Tool(T) Help(H)
=== Send SMS Complete ===

[1] 0935386862 2009/2/25 09:59:36
[2] 0935386862 2009/2/25 09:59:28
[4] 0931266207 2009/2/25 09:59:27
[3] 0912062361 2009/2/25 09:59:27
[1] 0935386862 2009/2/25 09:59:13
[2] 0912062361 2009/2/25 09:59:05
[4] 0931266207 2009/2/25 09:59:05
[3] 0981086825 2009/2/25 09:59:05

=== Login Telnet System ===

SMS Message Total: [ 8 ]
```

11.5 use AT Command via Telnet or your program

Allows your program or Telnet Send/receive SMS with AT Command
Port: 23

```
username: voip  
password: ****  
user level = 1.
```

Please enter account
and password

```
command: logout, module, module1, module2.  
>module1  
getting module 1 ...  
got!! press 'ctrl-x' to release module 1.
```

Choose module

```
0  
ate1
```

Enter "ate1", then you can see
your at command below

```
0  
at+cmgf=1
```

```
0  
at+cmgs="0911123456"
```


Enter at+cmgs="phone number"

```
>  
test
```

Enter short message and ctrl+Z

```
>  
+CMGS: 30  
0
```

11.6 USSD SIM Balance Check via Telnet

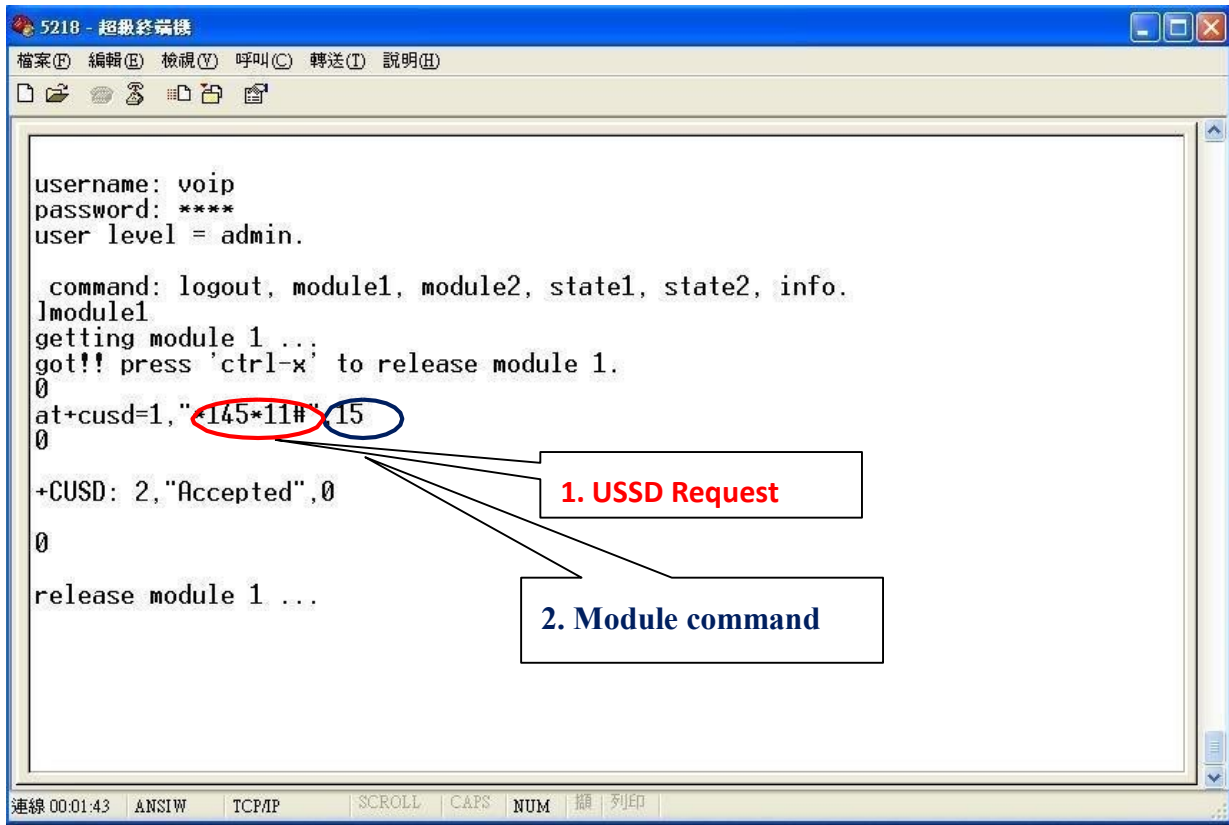

```
5218 - 超級終端機
檔案(F) 編輯(E) 檢視(V) 呼叫(C) 轉送(T) 說明(H)
[Icons]
username: voip
password: ****
user level = admin.

command: logout, module1, module2, state1, state2, info.
!module1
getting module 1 ...
got!! press 'ctrl-x' to release module 1.
0
at+cusd=1,*145*11#*15
0
+CUSD: 2,"Accepted",0
0
release module 1 ...
```

1. USSD Request

2. Module command

連線 00:01:43 ANSIW TCP/IP SCROLL CAPS NUM 擴 列印

1. USSD Request: It's the USSD code for your operator to check balance AR.

2. Module command:

Please enter "15" for Siemens BG2W module

Please enter "0" for Simcom module

🔧 You can check this information on main page in **Module Description**

After you send the USSD request, MV will receive the SMS from operator
Please check the incoming SMS on SMS Agent

PORTech
Your CTI Partner

SMS Reader

Index	RemotID	Date, Time
2	01145009310000990016	11/08/26, 15:24:43

帳單金額NT\$1836.0
付款期限8/28
累計未付金額NT\$1836.0
劃撥帳號 19037959
帳單號碼4046247121

Back Delete

11.7 SIM Setting

Route

Mobile

Status

Settings

Fwd Settings

SMS Agent

SIM Setting

Operator Setting

Network

SIP Settings

STUN Setting

Update

System Authority

Save Change

Reboot

CU ID: 111 (0001 ~ 9999, Server mode)

SIM Card of Mobile 1

Mode: Local Bank Server

Mobile ID: a0000000 Group: 1

Card ID: b0000000

Bank URL: _____

Server URL: 59.125.1.191:1200

Status: a0000000@59.125.1.190:9292

SIM Card of Mobile 2

Mode: Local Bank Server

Mobile ID: a0000001 Group: 2

Card ID: b0000001

Bank URL: _____

Server URL: 59.125.1.191:1200

Status: a0000002@59.125.1.190:9292

Submit Reset

1. CU ID: It's the ID for MV and SIM Server Transfer Protocol, within 1~9999. Each MV under same SIM Sever should setup different CU ID, and no reusing parameter. E.g. If you put "888" on 1st MV-378 that you can't use "888" on 2nd MV-378, and so on.
2. Mode
 - a. Local: Disable Remote SIM feature
 - b. Bank: Enable Remote SIM Bank feature, and manage SIM card on SBK-32 SIM Bank.
 - c. Server: Enable Remote SIM Server feature, and allocate SIM cards on SBK-32 SIM Bank.
3. Mobile
 - a. ID: Put in 8 digits (hexadecimal, also base 16), which used for GSM Module ID identification to Remote SIM protocol. User can define the ID. IF it's Server Mode, just leave it default. If it's Bank Mode, No reusing GSM Module ID for same SIM Bank.

-
-
- b. Group: Fill in SIM Group number for Remote GSM module. Server follow SIM Group Number to allocate SIM card to correspond GSM module
 4. Card ID: Put in 8 digits (hexadecimal, also base 16), which used for SIM Card ID identification to Remote SIM protocol. User can define the ID. If it's in Server Mode, Card ID can be blank or default. As for Bank Mode, Card ID must be corresponding to SIM Card ID of SIM Bank.
 5. Bank URL: If it's Bank Mode, please fill SIM Bank IP and Port Number. On other hand, please leave blank for Server Mode.
 6. Server URL: If it's Server Mode, please fill SIM Server IP and Port Number. On other hand, please leave blank for Bank Mode.
 7. Status: User can check the SIM Card ID of GSM module and IP, Port Number of SIM bank.

11.8 Operator Setting

PORTech
Your CTI Partner

Operator Setting

Mobile 1, 2 ▾

Mobile 1:

Operator ID	<input type="text"/> (0: resume auto)	List
Work Mode	<input type="radio"/> Every time reset module <input checked="" type="radio"/> Manual	Now

Mobile 2:

Operator ID	<input type="text"/> (0: resume auto)	List
Work Mode	<input type="radio"/> Every time reset module <input checked="" type="radio"/> Manual	Now

Submit Reset

1. Operator ID: When GSM module is registered, user can click the List to show all available operators in that area. You will see like follows diagram.

Operator List

Mobile 1 ▾

No	Status	Name	ID	Use
00	Current	Chunghwa Telecom (CHT)	46692	<input type="radio"/>
01	Forbidden	Far EasTone (FET)	46601	<input type="radio"/>
02	Forbidden	Pacific GSM 1800 (TCC)	46697	<input type="radio"/>
03				<input type="radio"/>
04				<input type="radio"/>
05				<input type="radio"/>
06				<input type="radio"/>
07				<input type="radio"/>

2. Work Mode:

a. Every time reset module:

Fill the assigned Operator ID, then press **Submit** bottom and save change. After reboot, GSM module will research the operator ID and registered the base station.

b. Manual:

Fill the assigned Operator ID, then press **Now** bottom. GSM module will search that Operator ID and registered after reboot.

11.9 Cell Info

It shows BTS (BCCH) cells of the cellular network and register to new BCCH selection. Support Quad band-BG2W, Quad band-M10 and firmware V10.185 above only.

Please work with this feature when the mobile status is “Stand by/Active”. It detects the surrounding active cell, up to 7 cells and shows Cell ID, signal and best signal (RXlev). The No.0 shows the data of current registered cell. Follow by No.1 to No.6 cell is based on cell signal (best to low).

select	MCC	LAC	Cell	BSIC	BCCH	RxLev
0	46601	0871	546F	20	629	-75
1	46601	0871	546E	20	661	-76
2	46601	0871	0000	21	640	-81
3	46601	0871	55C9	23	513	-86
4	46601	0853	70AE	61	532	-89
5	46601	0853	70AD	61	626	-92
6	46601	0871	5278	46	649	-92

	LAC	Cell ID	BCCH
<input type="checkbox"/> Preferred this Cell	0000	0000	0

MCC : Mobile Country Code

LAC : Location Area Code

Cell : Cell Identifier

BSIC: Base Station Identity Code

BCCH: Broadcast Control Channel

RxLev: Received Signal level in dbm

How to Configure

1. You can choose a BCCH channel by clicking on the cell. The module will automatically register in the new BCCH.
E.g. If you would like to register BCCH channel on No.4 cell, please click no4 select like below.



Cell Info

Mobile 1 ▾

select	MCC	LAC	Cell	BSIC	BCCH	RxLev
<input type="radio"/>	46601	0871	546F	20	629	-76
<input type="radio"/>	46601	0871	0000	20	661	-78
<input type="radio"/>	46601	0871	5470	21	640	-79
<input type="radio"/>	46601	0871	0000	23	513	-84
<input checked="" type="radio"/>	46601	0853	70AD	61	626	-89
<input type="radio"/>	46601	0853	70AE	61	532	-90
<input type="radio"/>	46601	0871	5278	46	649	-92

Refresh

-
2. System will show the cell number information once you select on Preferred this Cell form. Please click the submit button and Save Change on left to restart the module.

The screenshot displays a web-based interface for configuring mobile network parameters. At the top, there is a table with columns: select, MCC, LAC, Cell, BSIC, BCCH, and RxLev. The table contains seven rows of data. Row 4 is highlighted with a red oval. Below the table is a 'Refresh' button. An arrow points from the 'BCCH' value '626' in row 4 down to a form below. The form has a header with columns: LAC, Cell ID, and BCCH. The first row of the form has a checked checkbox labeled 'Preferred this Cell' (circled in red), and input fields for LAC (0853), Cell ID (70AD), and BCCH (626), all of which are also circled in red. At the bottom of the form are 'Submit' and 'Reset' buttons.

select	MCC	LAC	Cell	BSIC	BCCH	RxLev
<input type="checkbox"/>	46601	0871	546F	20	629	-76
<input type="checkbox"/>	46601	0871	0000	20	661	-78
<input type="checkbox"/>	46601	0871	5470	21	640	-79
<input type="checkbox"/>	46601	0871	0000	23	513	-84
<input checked="" type="checkbox"/>	46601	0853	70AD	61	626	-89
<input type="checkbox"/>	46601	0853	70AE	61	532	-90
<input type="checkbox"/>	46601	0871	5278	46	649	-92

Refresh

	LAC	Cell ID	BCCH
<input checked="" type="checkbox"/> Preferred this Cell	0853	70AD	626

Submit Reset

After system restart and turn to Standby, please check on No.0 cell and confirm the current registered cell you selected. At the point, the GSM module won't provide the data of surrounding cell signal, but shows -110dbm on No.1 to No.6 RxLev, which means GSM signal 0.




The image shows a screenshot of a mobile application interface displaying a table of GSM signal strength data. The table has seven columns: 'select', 'MCC', 'LAC', 'Cell', 'BSIC', 'BCCH', and 'RxLev'. The first row (select 0) is highlighted with a red oval and shows a signal strength of -88 dBm. The other rows (select 1 to 6) show a signal strength of -110 dBm. Below the table is a 'Refresh' button.

select	MCC	LAC	Cell	BSIC	BCCH	RxLev
0	46601	0853	70AD	61	626	-88
1	46601	0871	546F	20	629	-110
2	46601	0871	546E	20	661	-110
3	46601	0871	0000	23	513	-110
4	46601	0853	0000	61	532	-110
5	46601	0853	0000	23	656	-110
6	46601	0871	0000	27	667	-110

Refresh

-
3. If you would like to research all the surrounding BCCH cells again, please cancel Preferred this Cell selection first and send Submit, Save Change to restart the gateway. That, System can detect the surrounding active cell, up to 6 cells and display Cell ID, signal and best signal (RXlev).

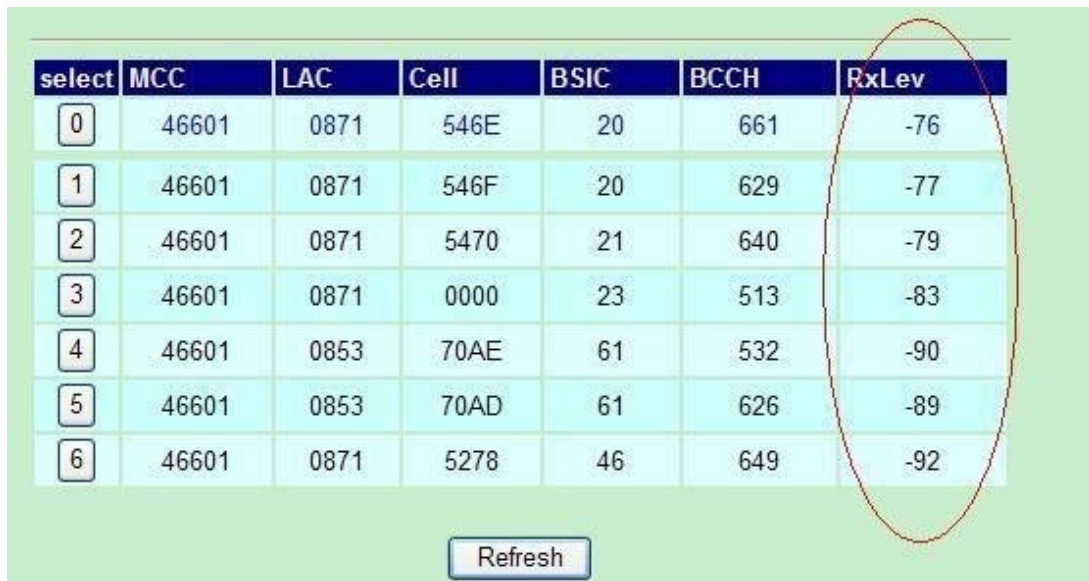

select	MCC	LAC	Cell	BSIC	BCCH	RxLev
0	46601	0871	546E	20	661	-76
1	46601	0871	546F	20	629	-77
2	46601	0871	5470	21	640	-79
3	46601	0871	0000	23	513	-83
4	46601	0853	70AE	61	532	-90
5	46601	0853	70AD	61	626	-89
6	46601	0871	5278	46	649	-92

Refresh

11.10 USSD (Unstructured Supplementary Service Data)

You can check USSD screen for SIM balance remaining and SIM recharge (add value) automatically. Please work with this feature when the mobile status is “Stand by/Active”. And ensure your Service provider has given you a USSD string(Command) for checking SIM Balance and Recharge the SIM Card.

The screenshot shows a web-based configuration interface for USSD services. On the left is a navigation menu with categories: Route, Mobile, Network, SIP Settings, Update, System Authority, and Save Change. Under the 'Mobile' category, 'USSD' is selected. The main content area is titled 'Rx Decoder: none' and contains three sections:

- Balance**: Command field contains '*123*11#' with a 'Send' button.
- Recharge**: Command field contains '*145*11#' with a 'Send' button. Below the command field, the response 'C1F1B80CA797C9' is displayed.
- Checking**: Command field contains 'at+cusd=1,**145*11#',15' with a 'Send' button.

At the bottom of the main area are 'Submit' and 'Reset' buttons.

1. Balance (SIM balance remaining)

Step1: Enter Balance checking USSD command in column

Step 2: Click Send button

When selected, system will check the balance of SIM and display the reply of receive message as below

This close-up view of the 'Balance' section shows the following details:


- The 'Cmd 1' input field contains the USSD command '*145*11#'. A red arrow labeled 'step1' points to this field.
- The 'Send' button is circled in red, with a red arrow labeled 'step2' pointing to it.
- Below the command field, the response '2, "Accepted",0' is displayed. A red arrow labeled 'receive message' points to this response.

2. Recharge (add value)

Step1: Enter the Recharging USSD command in column

Step 2: Click Send button

When selected, system will display the reply of receive message as below

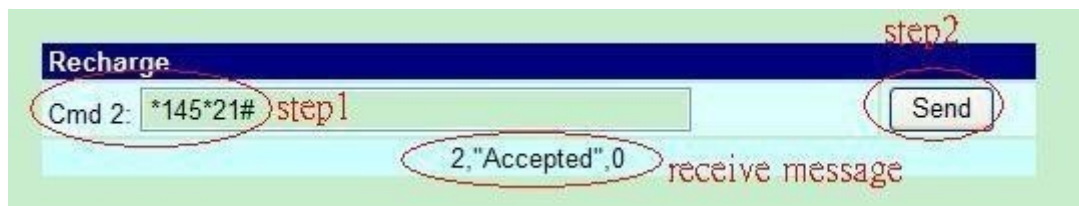


3. Checking (If above ways are failed, please select this)

Step 1: Enter the complete AT command in Cm3 column

Ex. **AT+CUSD=1,*145*11#,15**

Step 2: Click Send button

When selected, system will display the reply of receive message as below

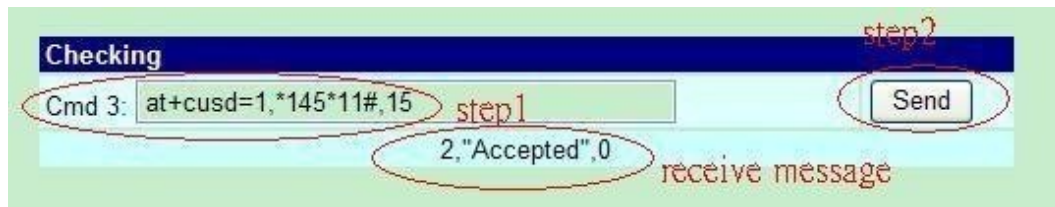

4. Rx Decoder

Rx Decoder: none

Balance

Cmd 1: *123*11# Send

Recharge

Cmd 2: *145*11# Send

C1F1B80CA797C9

Checking

Cmd 3: at+cusd=1,"*145*11#",15 Send

Submit Reset

- a. None: GSM Format (Default)
- b. ASC7: ASCII 7bit
- c. UCS2: Unicode 16bit

When user select default GSM Format(None), it may not receive correct GSM code due to the different operator or GSM module/chipset. Please check below example,

Rx Decoder: none

Balance

Cmd 1: *123*11# Send

Recharge

Cmd 2: *145*11# Send

C1F1B80CA797C9


Checking

Cmd 3: at+cusd=1,\"*145*11#",15 Send

In this case, user need to select other RX Decoder (ASCII or UCS2) to receive correct message.

For Example,

None format: When user send command, “*145*11#”, the return message show on system, “C1F1B80CA797C9”

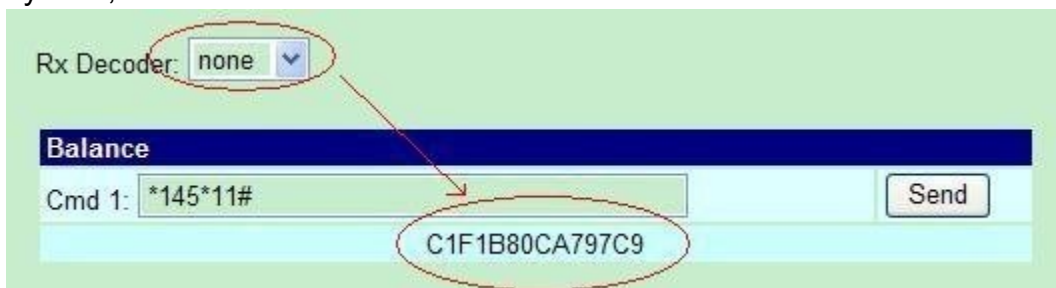


ASC7 Format: In this format, the return message is “Accepted”



12. Network

In Network you can check the Network status, configure the WLAN Settings, LAN Setting and SNTP settings.

12.1 Network Status: You can check the current Network setting in this page.

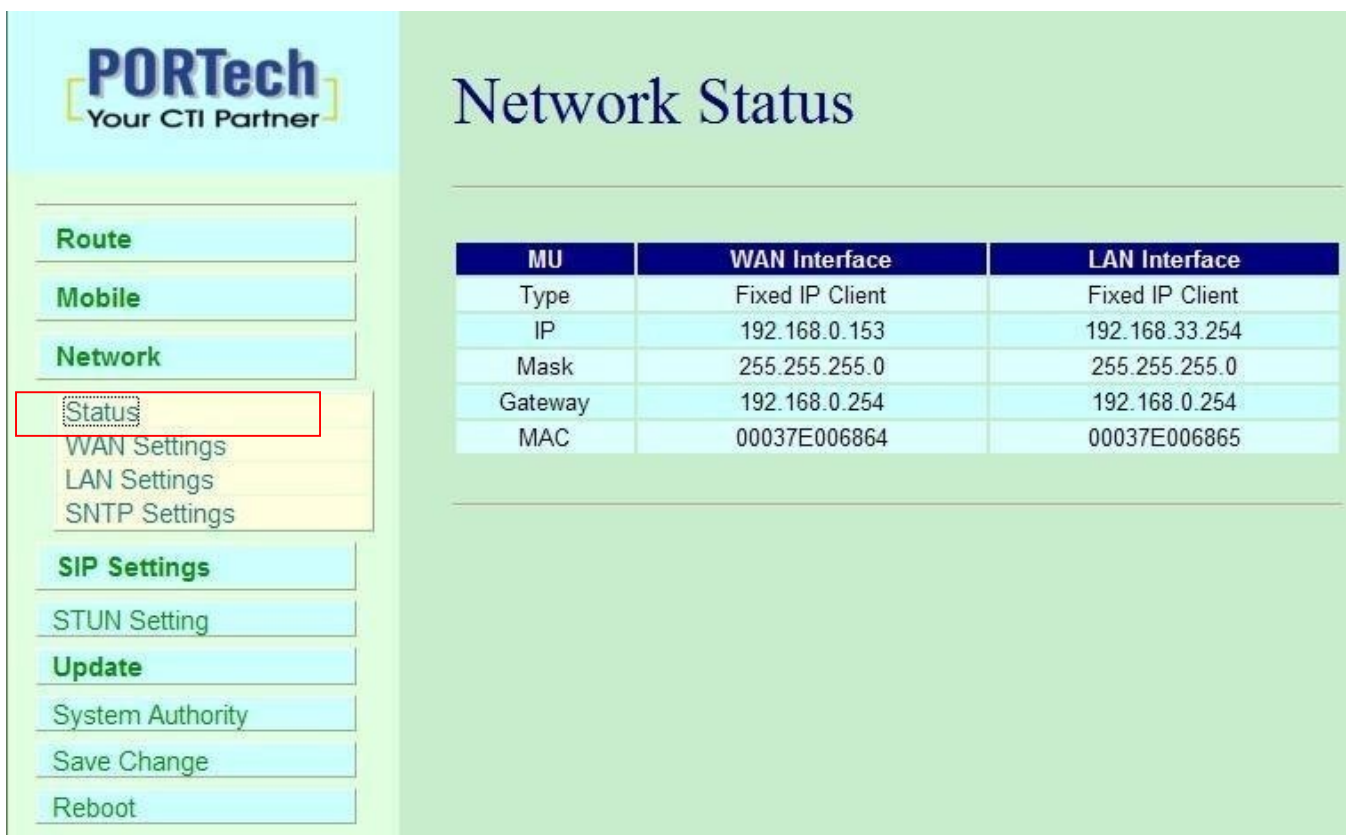

MU	WAN Interface	LAN Interface
Type	Fixed IP Client	Fixed IP Client
IP	192.168.0.153	192.168.33.254
Mask	255.255.255.0	255.255.255.0
Gateway	192.168.0.254	192.168.0.254
MAC	00037E006864	00037E006865

12.2 WAN Settings

PORTech
Your CTI Partner

WAN Settings

You could configure the WAN settings in this page.

Network Mode: Bridge NAT

WAN Setting

IP Type	<input checked="" type="radio"/> Fixed IP <input type="radio"/> DHCP Client <input type="radio"/> PPPoE
IP	<input type="text" value="192.168.0.122"/>
Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.0.254"/>
DNS Server1	<input type="text" value="168.95.192.1"/>
DNS Server2	<input type="text" value="168.95.1.1"/>
MAC	<input type="text" value="00037e009999"/>

PPPoE Setting

User Name	<input type="text"/>
Password	<input type="text"/>

- (1) The TCP/IP Configuration item is to setup the WAN port's network environment. You may refer to your current network environment to configure the system properly.
- (2) The PPPoE Configuration item is to setup the PPPoE Username and Password. If you have the PPPoE account from your Service Provider, please input the Username and the Password correctly.
- (3) The Bridge Item is to setup the system Bridge mode Enable/Disable. If you set the Bridge On, then the two Fast Ethernet ports will be transparent.
- (4) When you finished the setting, please click the Submit button.

12.3 LAN Settings

PORTech
Your CTI Partner

Route

Mobile

Network

Status

WAN Settings

LAN Settings

SNTP Settings

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

LAN Settings

LAN Setting	
IP:	<input type="text" value="192.168.0.102"/>
Mask:	<input type="text" value="255.255.255.0"/>
MAC:	<input type="text" value="00037e008888"/>

DHCP Server	
DHCP Server:	<input type="radio"/> On <input checked="" type="radio"/> Off
Start IP:	<input type="text" value="150"/>
End IP:	<input type="text" value="200"/>
Lease Time:	<input type="text" value="1"/> : <input type="text" value="0"/> (dd:hh)

- (1) The TCP/IP Configuration item is to setup the WAN port's network environment. You may refer to your current network environment to configure the system properly.
- (2)DHCP Server: You may refer to your current network environment to configure the system properly

12.4 SNTP Settings:

SNTP Setting function: you can setup the primary and second SNTP Server IP Address, to get the date/time information. Also you can base on your location to set the Time Zone, and how long need to synchronize again. When you finished the setting, please click the Submit button.

PORTech
Your CTI Partner

Route

Mobile

Network

Status

WAN Settings

LAN Settings

SNTP Settings

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

SNTP Settings

You could set the SNTP servers in this page.

SNTP: On Off

Primary Server:

Secondary Server:


Time Zone: GMT - : (hh:mm)

Sync. Time: : : (dd:hh:mm)

13. SIP Setting

In SIP Setting you can setup the Service Domain, Port Settings, Codec Settings, RTP setting, RPort Setting and Other Settings. If the VoIP service is provided by ISP, you need to setup the related informations correctly then you can register to SIP Proxy Server correctly.

13.1 In Service Domain Function you need to input the account and the related informations in this page, please refer to your ISP Provider. You can register three SIP accounts. You can dial the VoIP phone to your friends via first enable SIP account and receive the phone from the tree SIP account.

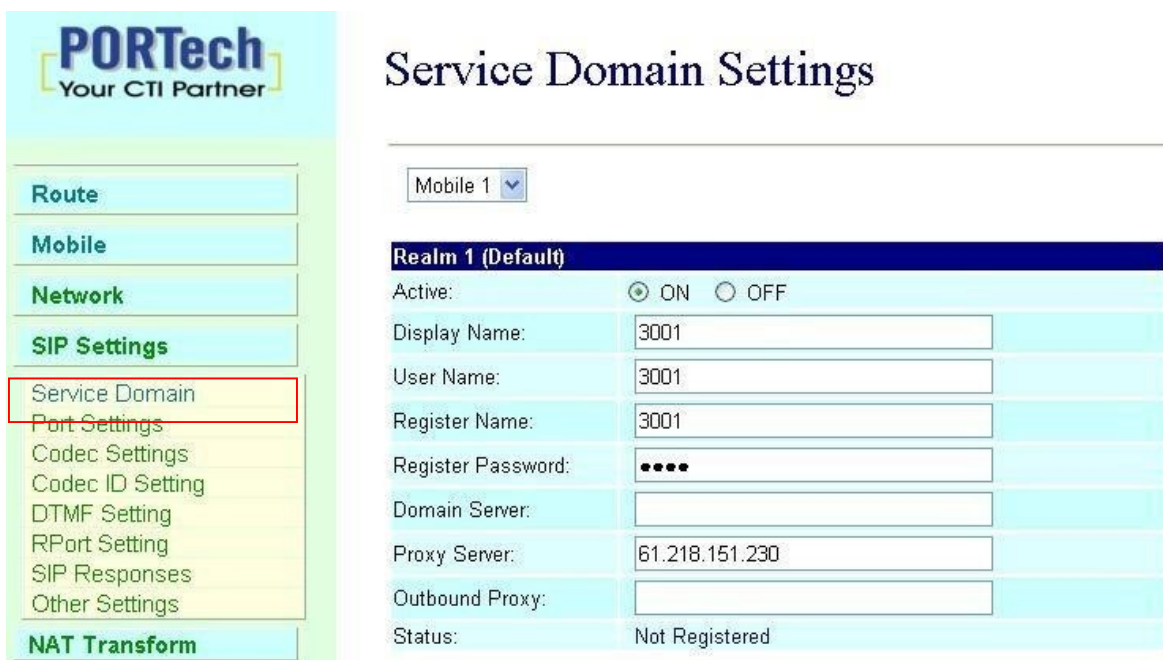

The screenshot displays the 'Service Domain Settings' page. On the left is a sidebar with the PORTech logo and a list of settings: Route, Mobile, Network, SIP Settings (highlighted), Service Domain (highlighted with a red box), Port Settings, Codec Settings, Codec ID Setting, DTMF Setting, RPort Setting, SIP Responses, Other Settings, and NAT Transform. The main content area is titled 'Service Domain Settings' and features a dropdown menu set to 'Mobile 1'. Below this is a section for 'Realm 1 (Default)' with the following fields: 'Active' (radio buttons for ON and OFF, with ON selected), 'Display Name' (text box with '3001'), 'User Name' (text box with '3001'), 'Register Name' (text box with '3001'), 'Register Password' (password field with four dots), 'Domain Server' (empty text box), 'Proxy Server' (text box with '61.218.151.230'), 'Outbound Proxy' (empty text box), and 'Status' (text 'Not Registered').

First you need to click Active to enable the Service Domain, then you can input the following items.

- (1) No. : choose Mobile 1 or Mobile 2
- (2) Display name: you can input the name you want to display.
- (3) User name: you need to input the User Name get from your ISP.
- (4) Register Name: you need to input the Register Name get from your ISP.

-
- (5) Register Password: you need to input the Register Password get from ISP.
 - (6) Domain Server: you need to input the Domain Server get from your ISP.
 - (7) Proxy Server: you need to input the Proxy Server get from your ISP.
 - (8) Outbound Proxy: you need to input the Outbound Proxy get from your ISP. If your ISP does not provide the information, then you can skip this item.
 - (9) You can see the Register Status in the Status item.
 - (10) When you finished the setting, please click the Submit button.
Remember to click "Save Charge"

Example:

Register VoipBuster

Realm 1 (Default)	
Active:	<input checked="" type="radio"/> On <input type="radio"/> Off
Display Name:	<input type="text" value="jenny0922"/>
User Name:	<input type="text" value="jenny0922"/> Your Voipbuster username
Register Name:	<input type="text" value="jenny0922"/>
Register Password:	<input type="password" value="****"/> Your Voipbuster password
Domain Server:	<input type="text"/>
Proxy Server:	<input type="text" value="194.221.62.207"/> Proxy Server's IP or domain name
Outbound Proxy:	<input type="text"/>
Status:	Registered

13.2 Port Setting

You can setup the SIP and RTP port number in this page. Each ISP provider will have different SIP/RTP port setting, please refer to the ISP to setup the port number correctly. When you finished the setting, please click the Submit button.

PORTech
Your CTI Partner

Route

Mobile

Network

SIP Settings

Service Domain

Port Settings

Codec Settings

Codec ID Setting

DTMF Setting

RPort Setting

SIP Responses

Other Settings

STUN Setting

Update

System Authority

Save Change

Reboot

Ports Setting

Port of Mobile 1		
SIP Port:	<input type="text" value="5060"/>	(1024~65533)
RTP Port:	<input type="text" value="20000"/> ~ <input type="text" value="20000"/>	(1024~65533)

Port of Mobile 2		
SIP Port:	<input type="text" value="5062"/>	(1024~65533)
RTP Port:	<input type="text" value="20002"/> ~ <input type="text" value="20002"/>	(1024~65533)

13.3 Codec Settings:

You can setup the Codec priority, RTP packet length in this page. You need to follow the ISP suggestion to setup these items. When you finished the setting, please click the Submit button.

PORTech
Your CTI Partner

- Route
- Mobile
- Network
- SIP Settings**
 - Service Domain
 - Port Settings
 - Codec Settings**
 - Codec ID Setting
 - DTMF Setting
 - RPort Setting
 - SIP Responses
 - Other Settings
- NAT Transform
- Update
 - System Authority
 - Save Change
 - Reboot

Codec Settings

Codec Priority	
Codec Priority 1:	G.711 u-law
Codec Priority 2:	G.711 a-law
Codec Priority 3:	G.723
Codec Priority 4:	G.729
Codec Priority 5:	G.726 - 16
Codec Priority 6:	G.726 - 24
Codec Priority 7:	G.726 - 32
Codec Priority 8:	G.726 - 40

RTP Packet Length	
G.711 & G.729:	20 ms
G.723:	30 ms

G.723 5.3K	
G.723 5.3K:	<input type="radio"/> On <input checked="" type="radio"/> Off

Voice VAD	
Voice VAD:	<input type="radio"/> On <input checked="" type="radio"/> Off

13.4 Codec ID Setting

You can setup the Codec ID in this page.

PORTech
Your CTI Partner

- Route
- Mobile
- Network
- SIP Settings**
 - Service Domain
 - Port Settings
 - Codec Settings
 - Codec ID Setting**
 - DTMF Setting
 - RPort Setting
 - SIP Responses
 - Other Settings
- NAT Transform
- Update
 - System Authority
 - Save Change
 - Reboot

Codec ID Setting

You could set the value of Codec ID in this page.

Codec Type	ID	Default Value
G726-16 ID:	<input type="text" value="23"/> (95~255)	<input checked="" type="checkbox"/> 23
G726-24 ID:	<input type="text" value="22"/> (95~255)	<input checked="" type="checkbox"/> 22
G726-32 ID:	<input type="text" value="2"/> (95~255)	<input checked="" type="checkbox"/> 2
G726-40 ID:	<input type="text" value="21"/> (95~255)	<input checked="" type="checkbox"/> 21
RFC 2833 ID:	<input type="text" value="101"/> (95~255)	<input checked="" type="checkbox"/> 101

13.5 DTMF Setting

PORTech
Your CTI Partner

DTMF Setting

DTMF Transfer Mobile to LAN

Format 2833 Inband SIP Info

Mobile DTMF Detection

Duration (0 ~ 999, -1: unlimit, unit: 1s) .

Debounce (40 ~ 500, default: 80 , unit: 10ms).

Route

Mobile

Network

SIP Settings

Service Domain

Port Settings

Codec Settings

Codec ID Setting

DTMF Setting

RPort Setting

SIP Responses

Other Settings

STUN Setting

Update

System Authority

Save Change

Reboot

1. Format:
 - a. 2833: Default RFC2833, the type of DTMF Data Transfer Format
 - b. Inband: The Type of Inband DMTF Data Transfer Format
 - c. SIP Info: The Type of SIP-Info DMTF Data Transfer Format;
2. Duration: Default is -1. It's the duration for MV-374/MV-378 to defect sender's DTMF. If the parameter is 0, MV-374/MV-378 won't detect sender's DTMF. Parameter is 0~999 seconds. After that duration, MV-374/MV-378 won't detect DTMF.
3. Debounce: Default is 80ms. User can adjust for own. If DTMF is adding more digits, please increase parameter over 80. If DMTF is lost digit, please decrease parameter less than 80.

13.6 RPort Function:

You can setup the RPort Enable/Disable in this page. To change this setting, please follow your ISP information. When you finished the setting, please click the Submit button.



PORTech
Your CTI Partner

- Route
- Mobile
- Network
- SIP Settings**
 - Service Domain
 - Port Settings
 - Codec Settings
 - Codec ID Setting
 - DTMF Setting
 - RPort Setting**
 - SIP Responses
 - Other Settings
- NAT Transform
- Update
 - System Authority
 - Save Change
 - Reboot

RPort Setting

RPort of Mobile 1: On Off
RPort of Mobile 2: On Off

13.7 SIP Responses

PORTech
Your CTI Partner

SIP Responses Setting

Response on port busy.	
<input checked="" type="radio"/> 486	Busy here
<input type="radio"/> 503	Service unavailable

SIP Responses	
<input type="radio"/> ON <input checked="" type="radio"/> OFF	180 Ringing (Force to ON, if 183 was OFF.)
<input checked="" type="radio"/> ON <input type="radio"/> OFF	183 Session Progress

Dial Peer	
<input checked="" type="radio"/> ON <input type="radio"/> OFF	<input type="text" value="192.168.0.156:5060"/> (Dial Peer for XP)

Call data to se	
<input checked="" type="radio"/> Yes <input type="radio"/> No	Send Call Events to Data S
Data ID	<input type="text" value="Mv153"/>
Data Server	<input type="text" value="192.168.0.156:5020"/> (URL:Port)

Dial Peer Configuration Table corresponding IP
(please read next page)

***** If you have dial peer server, Sip server/Asterisk set GSM route, please set Dial Peer server's IP****

13.7.1 486(busy here), 503(Service unavailable):

When Device is busy, you can select 486 or 505 to response to SIP.

13.7.2 180 Ring on/off:

LAN TO MOBILE two stage dialing can be turn off, therefore there will be no the Ring Back Tone, all the phone call will be transferred to prompt voice directly. (For this function, 183 must be turn on)

13.7.3 183(Session Progress)

[It means "on progressing"]: When you turn 183 on, it means you can hear the prompt voice while GSM side is busy We recommend you to turn this on if you use SIP Proxy.

13.7.4 Dial Peer

LAN to mobile: Dial peer software will look for available channel to dial out. E.g When the first port is busy, MV-378 will use the second port to dail out...and so forth.

13.7.5 Call data to server

MV can provide Call Detail Record (CDR) for traffic and accounting management. User need to download external Dial Peer software on PC and can monitor traffic.

Data ID: MV will create one default Data ID

Data Server: Please fill the PC's IP, which is executed External Dial Peer Software

Edit DialPeer.ini

[Window]
Xpos=512
Ypos=252
Width=471
Height=399
[Info]
Total=16

Total ip / port

[VoipIP]
1=192.168.0.100
2=192.168.0.100
3=192.168.0.100
4=192.168.0.100
5=192.168.0.100
6=192.168.0.100
7=192.168.0.100
8=192.168.0.100
9=192.168.0.110
10=192.168.0.110
11=192.168.0.110
12=192.168.0.110
13=192.168.0.110
14=192.168.0.110
15=192.168.0.110
16=192.168.0.110

The first
MV-378

The second
MV-378

[SipPort]
1=5060
2=5062
3=5064
4=5066
5=5068
6=5070
7=5072
8=5074
9=5060
10=5062
11=5064
12=5066
13=5068

The first
MV-378

The second
MV-378

14=5070
15=5072
16=5074

The second
MV-378

[RtpPort]
1=60000
2=60002
3=60004
4=60006
5=60008
6=60010
7=60012
8=60014

The first
MV-378

9=60000
10=60002
11=60004
12=60006
13=60008
14=60010
15=60012
16=60014

The second
MV-378


[PtcPort]
1=40000
2=40000
3=40008
4=40008
5=40016
6=40016
7=40024
8=40024
9=40000

The first
MV-378

10=40000
11=40008
12=40008
13=40016
14=40016
15=40024
16=40024

The second
MV-378

Log

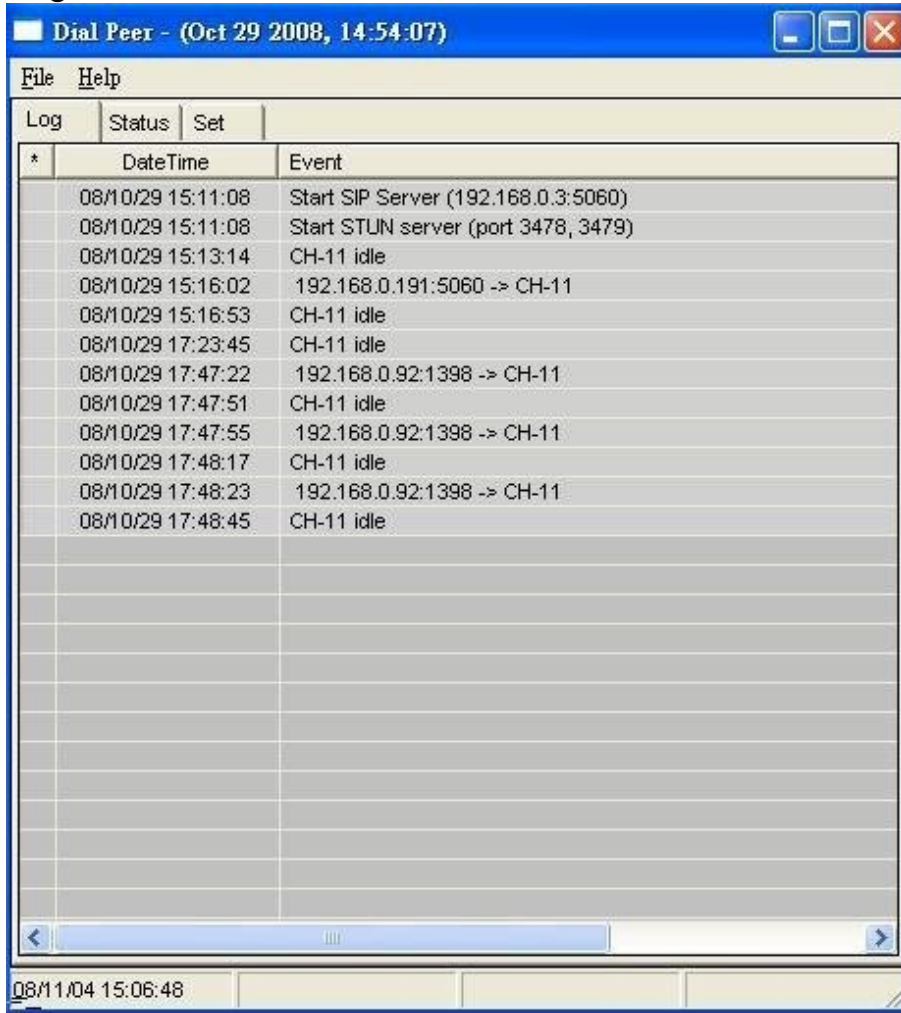

The screenshot shows a window titled "Dial Peer - (Oct 29 2008, 14:54:07)". The window has a menu bar with "File" and "Help". Below the menu bar are three tabs: "Log", "Status", and "Set". The "Log" tab is active, displaying a table with three columns: "*", "DateTime", and "Event". The table contains the following entries:

*	DateTime	Event
	08/10/29 15:11:08	Start SIP Server (192.168.0.3:5060)
	08/10/29 15:11:08	Start STUN server (port 3478, 3479)
	08/10/29 15:13:14	CH-11 idle
	08/10/29 15:16:02	192.168.0.191:5060 -> CH-11
	08/10/29 15:16:53	CH-11 idle
	08/10/29 17:23:45	CH-11 idle
	08/10/29 17:47:22	192.168.0.92:1398 -> CH-11
	08/10/29 17:47:51	CH-11 idle
	08/10/29 17:47:55	192.168.0.92:1398 -> CH-11
	08/10/29 17:48:17	CH-11 idle
	08/10/29 17:48:23	192.168.0.92:1398 -> CH-11
	08/10/29 17:48:45	CH-11 idle

At the bottom left of the window, there is a status bar showing "08/11/04 15:06:48".

Status

CH	Mv IP	port	state	remote
1	192.168.0.100	5060	-s-	-r-
2	192.168.0.100	5062	-s-	-r-
3	192.168.0.100	5064	-s-	-r-
4	192.168.0.100	5066	-s-	-r-
5	192.168.0.100	5068	-s-	-r-
6	192.168.0.100	5070	-s-	-r-
7	192.168.0.100	5072	-s-	-r-
8	192.168.0.100	5074	-s-	-r-
9	192.168.0.110	5060	OFF/0	-r-
10	192.168.0.110	5062	IDLE/0	-r-
11	192.168.0.110	5064	IDLE/1	-r-
12	192.168.0.110	5066	OFF/0	-r-
13	192.168.0.110	5068	OFF/0	-r-
14	192.168.0.110	5070	OFF/0	-r-
15	192.168.0.110	5072	OFF/0	-r-
16	192.168.0.110	5074	OFF/0	-r-

08/11/04 15:07:14

The first MV-378 doesn't register dial peer software

The 2,3ch of Second MV-378 idle

The 1,4-8ch of Second MV-378 turn off

13.8 Other Settings

Other Settings: you can setup the Hold by RFC and QoS in this page. To change these settings, please following your ISP information. When you finished the setting, please click the Submit button. The QoS setting is to set the voice packets' priority. If you set the value higher than 0, then the voice packets will get the higher priority to the Internet. But the QoS function still need to cooperate with the others Internet devices.

PORTech
Your CTI Partner

- Route
- Mobile
- Network
- SIP Settings**
 - Service Domain
 - Port Settings
 - Codec Settings
 - Codec ID Setting
 - DTMF Setting
 - RPort Setting
 - SIP Responses
 - Other Settings**
- NAT Transform
- Update
 - System Authority
 - Save Change
 - Reboot

Other Settings

Hold by RFC of Mobile 1 On Off

Hold by RFC of Mobile 2 On Off

Voice QoS: (0~63)


SIP QoS: (0~63)

SIP Expire Time: (60~86400 sec)

14. NAT Trans

In NAT Trans. you can setup STUN and uPnP function. These functions can help your VoIP device working properly behind NAT.

14.1 STUN Setting: you can setup the STUN Enable/Disable and STUN Server IP address in this page. This function can help your VoIP device working properly behind NAT. To change these settings please following your ISP information. When you finished the setting, please click the Submit button.

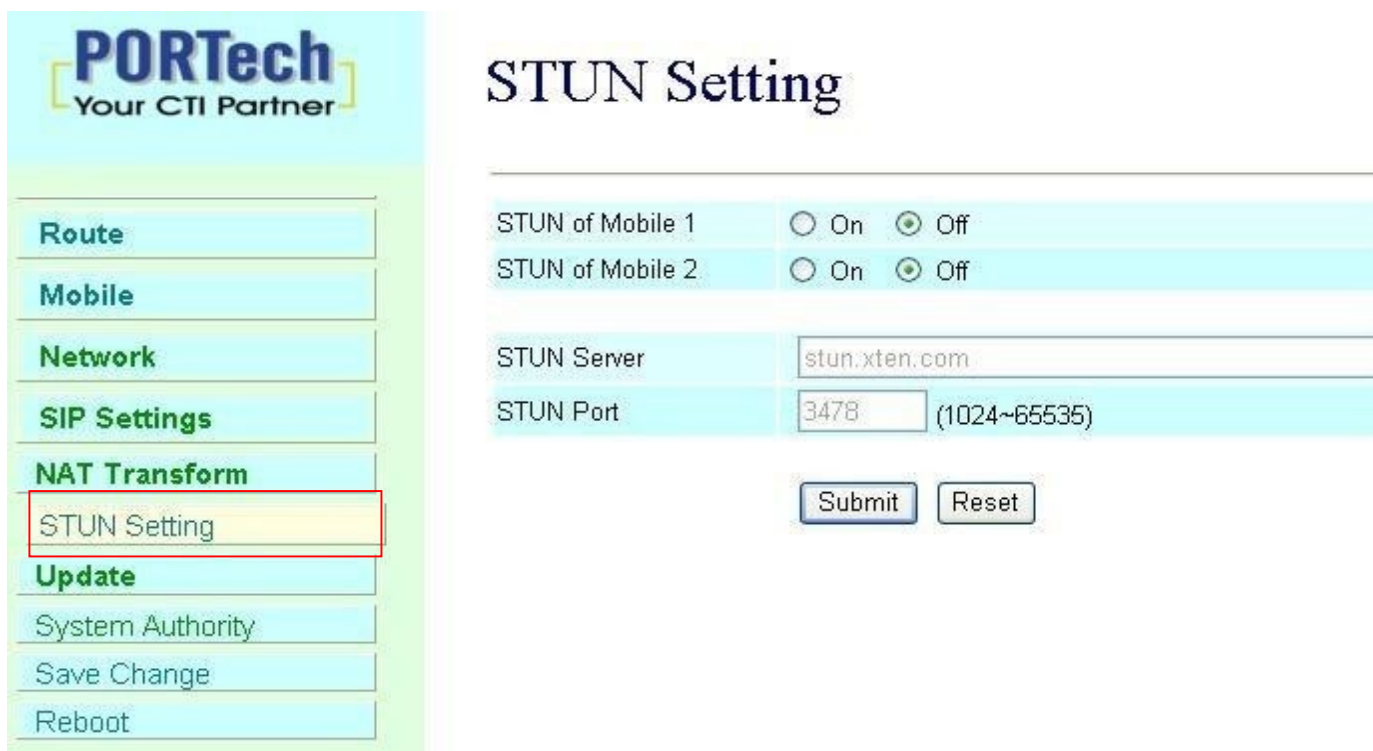

PORTech
Your CTI Partner

Route

Mobile

Network

SIP Settings

NAT Transform

STUN Setting

Update

System Authority

Save Change

Reboot

STUN Setting

STUN of Mobile 1 On Off

STUN of Mobile 2 On Off

STUN Server

STUN Port (1024~65535)

15. Update

In Update you can update the system's firmware to the new one or execute the factory reset to let the system back to default setting.

15.1 Update firmware

The screenshot shows the PORTech web interface. On the left, a sidebar contains menu items: Route, Mobile, Network, SIP Settings, STUN Setting, Update (highlighted), New Firmware (highlighted with a red box), Default Settings, System Authority, Save Change, and Reboot. The main content area is titled 'Update Firmware' and displays 'Ver = v10.115 , GZ = Mv , PCB = 2N149A .'. Below this is a form with a 'HTTP' header, a 'Code Type' dropdown menu set to 'RISC', and a 'File Location' text input field with a '瀏覽...' (Browse) button. At the bottom of the form are 'Submit' and 'Reset' buttons.

- (1) Select the firmware code type, Risc code only.
- (3) Click the "Browse" button in the right side of the File Location or you can type the correct path and the filename in File Location blank.
- (4) Select the correct file you want to download to the system then click the Update button.
- (5) Please click update/default setting after update firmware

NOTE: Please open the webpage from Internet Explorer, not compatible with FF or Google Chrome

15.2 Restore Default Settings

In this page: Update/ Default Settings, you could restore the factory default settings to the system. **All setting will restore default setting. IP will retain original IP as usual not default IP.**



Restore Default Settings

You could click the restore button to restore the factory settings.

Restore default settings:

16. System Auth.

In System Authority you can change your login name and password.



System Authority

You could change the login username/password in this page.

New username:	<input type="text"/>
New password:	<input type="password"/>
Confirmed password:	<input type="password"/>
	<input type="button" value="Submit"/> <input type="button" value="Reset"/>

17. Save Change

In Save Change you can save the changes you have done. If you want to use new setting in the VoIP system, you have to click the Save button. After you click the Save button, the system will automatically restart and the new setting will effect.



Save Changes

You have to save changes to effect them.

Save Changes:

18. Reboot

Reboot function you can restart the system. If you want to restart the system, you can just click the Reboot button, then the system will automatically.



Reboot System

You could press the reboot button to restart the system.

Reboot system:

19. IP Setting

The operator can setup or query the network parameters by dialing in the mobile number which it SIM card has been put in the main body. The status or result is response by voice. In the first 20 seconds after power-on, the VoIP GSM Gateway enters the IP setting mode. The operator may dial in the mobile number during this period to set or query the network parameters.

Item	IVR Action	IVR Menu Choice	Notes
1	Reboot	#195#	After you hear "Option Successful," hang-up. Unit will reboot automatically.
2	Factory Reset	#198#	All setting (include IP) both restore to default setting. WARNING: ALL User-Changeable" NONDEFAULT SETTINGS WILL BE LOST! This will include network and service provider data.
3	Check IP Address	#120#	IVR will announce the current IP address , Default : 192.168.0.100
4	Check IP Type	#121#	IVR will announce if DHCP in enabled or disabled. default : OFF
5	Check Network Mask	#123#	IVR will announce the current network mask.Default : 255.255.255.0
6	Check Gateway IP Address	#124#	IVR will announce the current gateway IP address, Default : 192.168.0.254

7	Check Primary DNS Server	#125#	IVR will announce the current setting in the Primary DNS field. Default : 192.168.0.1
8	Check Firmware Version	#128#	IVR will announce the version of the firmware running
9	Set as DHCP client	#111#	The system will change to DHCP Client type
10	Set Static IP Address	#112xxx*xxx*xxx*xxx#	DHCP will be disabled and system will change to the Static IP type. Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.
11	Set Network Mask	#113xxx*xxx*xxx*xxx#	Must set Static IP first. Enter value using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.
12	Set Gateway IP Address	#114xxx*xxx*xxx*xxx#	Must set Static IP first. Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.
13	Set Primary DNS Server	#115xxx*xxx*xxx*xxx#	Must set Static IP first. Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.

20. Specification

20.1 Protocols

SIP (RFC2543,RFC3261)

20.2 TCP/IP

IP/TCP/UDP/RTP/RTCP/

CMP/ARP/RARP/SNTP

DHCP/DNS Client

IEEE802.1P/Q

ToS/DiffServ

NAT Traversal

STUN

uPnP

IP Assignment

Static IP

DHCP

PPPoE

20.3 Codec

G.711 u-Law

G.711 a-Law

G.723.1 (5.3k)

G.723.1 (6.3k)

G.729A

G.729A/B

20.4 Voice Quality

VAD

CNG AEC,

LEC

Packet loss

20.5 GSM (MV-370/MV-372)

- **3G Frequency:**

U Version:2G 850,900,1800,1900MHz,3G 850,2100 MHz

A Version:2G 850,900,1800,1900MHz,3G 850,1900 MHz

G Version:2G 850,900,1800,1900MHz,3G 800/850/900/1900/2100HMZ

- **4G LTE Frequency (Global)**

L version

LTE FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B25/B26/B28

LTE TDD: B38/B39/B40/B41

WCDMA: B1/B2/B4/B5/B6/B8/B19

GSM: B2/B3/B5/B8

*must insert 4g sim

21. Simple Steps

Step 1. Change the Network setting as you need (Network/network setting)

Step 2. Register SIP proxy Server or Asterisk or VoipBuster as you need
(sip setting/service domain)

Step 3. Set Mobile setting –adjust your gain as you need

Step 4. Set Route (**request**)

mobile to LAN:	
(1) *,* --->it is two stage dialing.	
	when mobile call in,MV-370/MV-372 will provide dial tone and you can enter ip or asterisk extension or phone number.
*	If you want to enter phone number,please note your asterisk need to have route of destination number.
(2) *, specific extension or IP or phone number	
	when mobile call in,MV-370/MV-372 will connect with this specific extension or IP or phone number auto
*	If you want to set specific phone number,please note your asterisk need to have route of destination number.
LAN to MOBILE.	
(1) *,* --->it is two stage dialing.	
	when LAN phone call in,MV-370/MV-372 will provide dial tone and you can enter mobile number.
(2) *, specific mobile number	
	when LAN phone call in,MV-370/MV-372 will connect with the specific mobile number auto.
(3) *,#--->It is 1 stage dialing	
	When LAN phone and MV-370/MV-372 both register Asterisk, you can dial any destination number from LAN phone directly.
*	Please note:Asterisk need to set route of destination number that dial out from MV-370/MV-372

* All changes both need to click "save and change"

22. Appendix: Setup MV-370/MV-372 with Asterisk

M V -370/372 Settings

PORTech
Your CTI Partner

- Route
- Mobile
 - Status
 - Settings
 - Fwd Settings
 - SMS Agent
- Network
- SIP Settings
- STUN Setting
- Update
 - System Authority
 - Save Change
 - Reboot

Mobile Setting

Mobile 1, 2

VoIP Tx Gain:	9 (0~12)	VoIP Rx Gain:	11 (0~15)
LAN Dialtone Vol:	9 (0~12)		
Mobile 1 <input checked="" type="radio"/> ON <input type="radio"/> OFF			
Routing Range	0 to 49 (0~49)		
CODEC Tx Gain:	6 (0~7)	CODEC Rx Gain:	6 (0~7)
SIP From:	Tel/Tel (Not Reg)	Answer Delay	0 (0~15)
CLID Presentation	<input type="radio"/> Suppression <input checked="" type="radio"/> Invocation		
Mobile PIN Code:	On <input type="checkbox"/> Code: <input type="text"/>	Confirmed:	<input type="text"/>
LAN Answer Mode	<input checked="" type="radio"/> Answered <input type="radio"/> Alerted <input type="radio"/> Income		

Asterisk want to transfer CLID, please choose Tel/Tel (Not Reg)

Mobile Voip

- Route
- Mobile
- Network
- SIP Settings
- Service Domain
- Port Settings
- Codec Settings
- Codec ID Setting
- DTMF Setting
- RPort Setting
- SIP Responses
- Other Settings
- STUN Setting

Service Domain Settings

Mobile 1

Realm 1 (Default)

Active:	<input checked="" type="radio"/> ON <input type="radio"/> OFF
Display Name:	<input type="text"/>
User Name:	<input type="text"/>
Register Name:	<input type="text"/>
Register Password:	<input type="text"/>
Domain Server:	192.168.0.192:5060
Proxy Server:	192.168.0.192:5060
Outbound Proxy:	<input type="text"/>
Status:	Not Registered

Can register Asterisk or not

PORTech
Your CTI Partner

Route

Mobile To Lan Settings
Mobile To Lan Speed Dial
Lan To Mobile Settings
Dial Peer Status

Mobile

Network

SIP Settings

STUN Setting

Update

System Authority
Save Change
Reboot

Mobile To LAN Table

Mobile 1, 2 ▾

Set your Asterisk IP, extension or *

Page: 1 ▾

Item	CID	URL	Select
0	*	192.168.0.192	<input type="checkbox"/>
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

PORTech
Your CTI Partner

Route

Mobile To Lan Settings
Mobile To Lan Speed Dial
Lan To Mobile Settings
Dial Peer Status

Mobile

Network

SIP Settings

STUN Setting

Update

System Authority
Save Change
Reboot

LAN To Mobile Table

Mobile 1, 2 ▾

As Asterisk GSM
Route

Page: 1 ▾

Item	URL	Call Num	Select
0	*	#	<input type="checkbox"/>
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Port Settings:

PORTech
Your CTI Partner

Ports Setting

Port of Mobile 1		
SIP Port:	<input type="text" value="5060"/>	(1024~65535)
RTP Port:	<input type="text" value="60000"/>	(1024~65535)

Port of Mobile 2		
SIP Port:	<input type="text" value="5062"/>	(1024~65535)
RTP Port:	<input type="text" value="60100"/>	(1024~65535)

Mobile1 > Sip port: 5060

Mobile2 > Sip port: 5062 → Important!!!

Don't forget to Save changes and then reboot

Asterisk / Trixbox setting

Add SIP Trunk:

MV-372 must create 2 trunk.

First trunk: MV-372 ip:5060

Second Trunk: MV-372 ip:5062

Edit SIP Trunk

Delete Trunk SIM1

In use by 1 route

General Settings

Outbound Caller ID:

Never Override CallerID:


Maximum channels:

Outgoing Dial Rules

Dial Rules:


Dial rules wizards:

Outbound Dial Prefix:

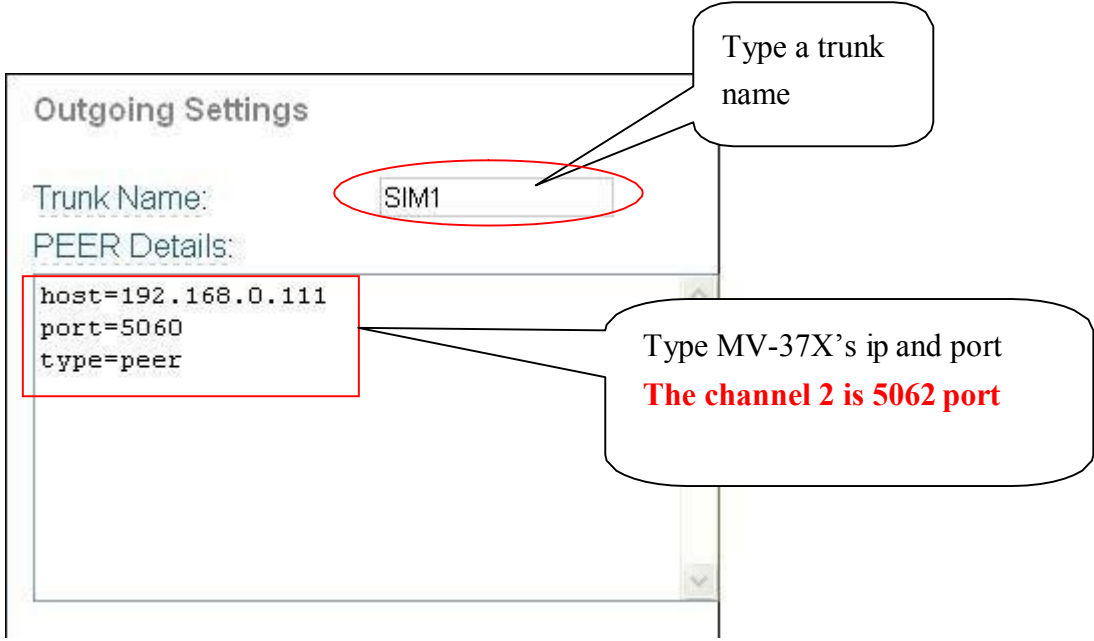

Set GSM Route that dial out via MV-37X

After change , please press “**Submit changes**” and “**apply configuration changes**”

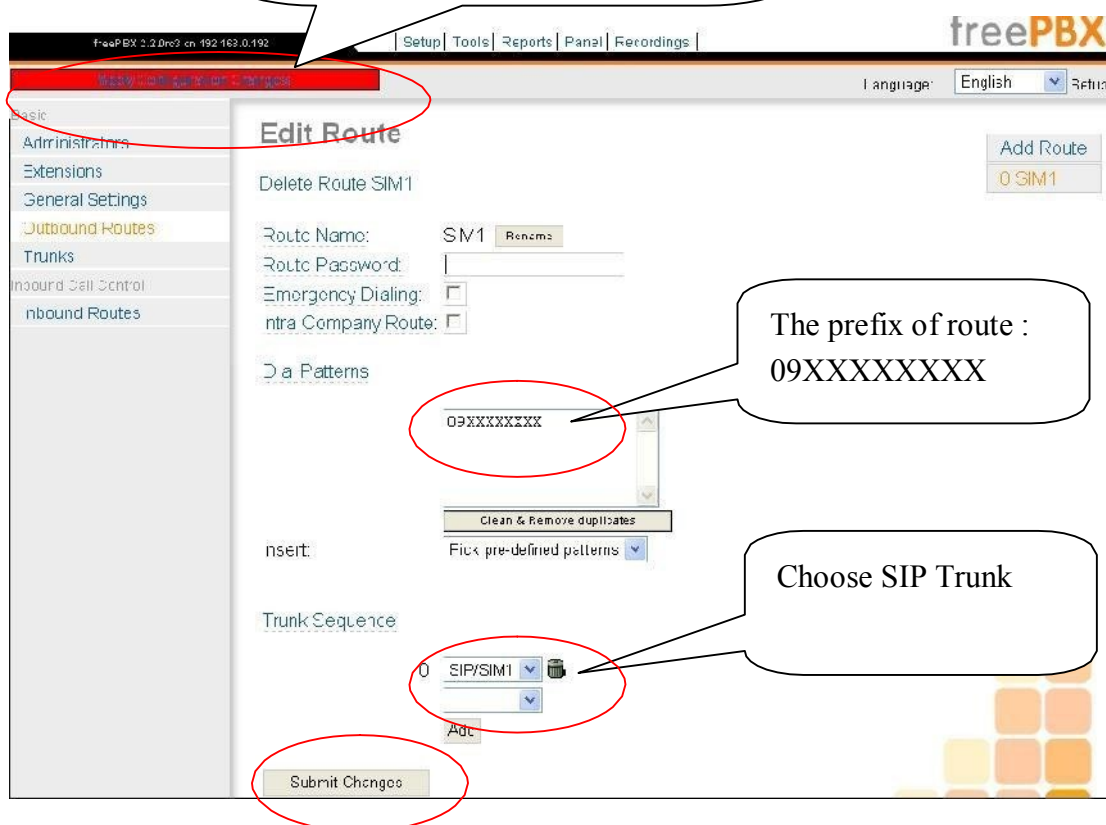

Frequency: Quad Band:900/1800/1900/850MHZ

GSM Module use Simcom sim340

Compliant to GSM phase 2/2+

-Class 4 (2W@850/900 MHz)

-Class 1 (1W@1800/1900 MHz)

15.21

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



Pulse Supply
909 Ridgebrook Road., Sparks, Maryland 21152, USA
TEL : +1-410-583-1701 FAX : +1-410-583-1704
E-mail: sales@pulsesupply.com
<https://www.pulsesupply.com/portech>